



Henny Penny
Humidified Holding Cabinets
Model HHC-980
Model HHC-983

TECHNICAL MANUAL

LIMITED WARRANTY FOR HENNY PENNY EQUIPMENT

Subject to the following conditions, Henny Penny Corporation makes the following limited warranties to the original purchaser only for Henny Penny appliances and replacement parts:

NEW EQUIPMENT: Any part of a new appliance, except baskets, lamps, and fuses, which proves to be defective in material or workmanship within two (2) years from date of original installation, will be repaired or replaced without charge F.O.B. factory, Eaton, Ohio, or F.O.B. authorized distributor. Baskets will be repaired or replaced for ninety (90) days from date of original installation. Lamps and fuses are not covered under this Limited Warranty. To validate this warranty, the registration card for the appliance must be mailed to Henny Penny within ten (10) days after installation.

FILTER SYSTEM: Failure of any parts within a fryer filter system caused by the use of the non-OEM filters or other unapproved filters is not covered under this Limited Warranty.

REPLACEMENT PARTS: Any appliance replacement part, except lamps and fuses, which proves to be defective in material or workmanship within ninety (90) days from date of original installation will be repaired or replaced without charge F.O.B. factory, Eaton, Ohio, or F.O.B. authorized distributor.

The warranty for new equipment covers the repair or replacement of the defective part and includes labor charges and maximum mileage charges of 200 miles round trip for a period of one (1) year from the date of original installation.

The warranty for replacement parts covers only the repair or replacement of the defective part and does not include any labor charges for the removal and installation of any parts, travel, or other expenses incidental to the repair or replacement of a part.

EXTENDED FRYPOT WARRANTY: Henny Penny will replace any frypot that fails due to manufacturing or workmanship issues for a period of up to seven (7) years from date of manufacture. This warranty shall not cover any frypot that fails due to any misuse or abuse, such as heating of the frypot without shortening.

0 TO 3 YEARS: During this time, any frypot that fails due to manufacturing or workmanship issues will be replaced at no charge for parts, labor, or freight. Henny Penny will either install a new frypot at no cost or provide a new or reconditioned replacement fryer at no cost.

3 TO 7 YEARS: During this time, any frypot that fails due to manufacturing or workmanship issues will be replaced at no charge for the frypot only. Any freight charges and labor costs to install the new frypot as well as the cost of any other parts replaced, such as insulation, thermal sensors, high limits, fittings, and hardware, will be the responsibility of the owner.

Any claim must be presented to either Henny Penny or the distributor from whom the appliance was purchased. No allowance will be granted for repairs made by anyone else without Henny Penny's written consent. If damage occurs during shipping, notify the sender at once so that a claim may be filed.

THE ABOVE LIMITED WARRANTY SETS FORTH THE SOLE REMEDY AGAINST HENNY PENNY FOR ANY BREACH OF WARRANTY OR OTHER TERM. BUYER AGREES THAT NO OTHER REMEDY (INCLUDING CLAIMS FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES) SHALL BE AVAILABLE.

The above limited warranty does not apply (a) to damage resulting from accident, alteration, misuse, or abuse; (b) if the equipment's serial number is removed or defaced; or (c) for lamps and fuses. THE ABOVE LIMITED WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING MERCHANTABILITY AND FITNESS, AND ALL OTHER WARRANTIES ARE EXCLUDED. HENNY PENNY NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO ASSUME FOR IT ANY OTHER OBLIGATION OR LIABILITY.

Revised 01/01/07

TABLE OF CONTENTS

Section	Page
Section 1. TROUBLESHOOTING	
1-1. Introduction	1-1
1-1. Safety	1-1
1-3. Troubleshooting	1-1
1-4. Error Codes and Warnings	1-5
1-5. Info Mode	1-8
Section 2. LEVEL 2 PROGRAMMING	
2-1. Introduction	2-1
2-2. Tech Mode	2-1
2-3. Stats Mode	2-5
2-4. Data Logging and Manufacturing Mode	2-8
Section 3. MAINTENANCE	
3-1. Introduction	3-1
3-2. Maintenance Hints	3-1
3-3. Humidity Sensor Calibration and Replacement	3-1
3-4. Fuse and Fuse Holder Assembly	3-4
3-5. Power Switch Replacement	3-5
3-6. Air Temperature Probe Replacement	3-6
3-7. Transformer Replacement	3-8
3-8. Relay Replacement	3-9
3-9. Module Top Removal	3-10
3-10. Cooling Fan Replacement	3-11
3-11. High Limit - Air Heater Replacement	3-11
3-12. Blower Motor Replacement	3-12
3-13. Air Heater Replacement	3-13
3-14. Speaker Replacement	3-13
3-15. Complete Panel or PC Board Replacement	3-14
3-16. Float Switch Replacement	3-15
3-17. High Limit - Water Heater Replacement	3-16
3-18. Water Heater Replacement	3-17
3-19. Drain Valve Replacement	3-18
3-20. Cleaning Water Strainer	3-19
3-21. Water Valve (Solenoid) Replacement	3-19
3-22. Door Gasket Replacement	3-21
Wiring Diagrams	3-22
Section 4. PARTS INFORMATION	
4-1. Introduction	4-1
4-2. Genuine Parts	4-1
4-3. When Ordering Parts	4-1
4-4. Prices	4-1
4-5. Delivery	4-1
4-6. Warranty	4-1
4-7. Recommended Spare Parts for Distributors	4-1
Parts List	4-2

SECTION 1. TROUBLESHOOTING

1-1. INTRODUCTION

This section provides troubleshooting information in the form of an easy to read table.

If a problem occurs during the first operation of a cabinet, recheck the installation per the Installation Section of the Operator’s Manual

Before troubleshooting, always recheck the operation procedures in the Operator’s manual.

1-2. SAFETY

Where information is of particular importance or is safety related, the words NOTICE, CAUTION, or WARNING are used. Their usage is described below.



SAFETY ALERT SYMBOL is used with DANGER, WARNING, or CAUTION which indicates a personal injury type hazard.



NOTICE is used to highlight especially important information.



CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.



CAUTION used with the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

1-3. TROUBLESHOOTING

To isolate a malfunction, proceed as follows:

1. Clearly define the problem or symptom and when it occurs.
2. Locate the problem in the troubleshooting table.
3. Review all possible causes. Then, one at a time work through the list of corrections until problem is solved.



If maintenance procedures are not followed correctly, injuries and/or property damage could result.

1-3. TROUBLESHOOTING (continued)

Problem	Cause	Correction
OPERATION		
<p>A. Product not holding temperature</p>	<ul style="list-style-type: none"> • Doors left open • Product held too long • Control temperature set too low • Bad air heater • Blower not working • Bad air heater or blower relays • Bad high limit • Low or improper voltage • Door Gasket torn or worn • Air probe faulty, open (“E-6A”) or shorted (“E-6B”) 	<ul style="list-style-type: none"> • Keep doors closed except to load and serve product • Hold product only for recommended times • Increase air temperature setpoint to 185°F (85°C); (SP-3) in Special Program Mode • Check heaters and replace if bad; see Tech Mode items 10 and 18 • Check blower and replace if bad; see Tech Mode item 18 • Replace relay; see Tech Mode items 10 and 18 • Check high limit and replace if bad • Compare receptacle voltage to data plate voltage • Replace bad door gaskets • Ohm out the probe and replace if necessary
<p>B. Cabinet steaming product soggy</p>	<ul style="list-style-type: none"> • Humidity setpoint too high • Water heater probe faulty, open (“E-12A”), or closed (“E-12B”) • Bad humidity sensor (“E17”) • Relay stuck closed 	<ul style="list-style-type: none"> • Set humidity to 28% (SP-4) in Special Program Mode • Ohm out the probe and replace if necessary • Replace humidity sensor • Replace relay

1-3. TROUBLESHOOTING (continued)

Problem	Cause	Correction
OPERATION (Continued)		
C. Product dry	<ul style="list-style-type: none"> • Bad float switch (E-18) • Bad water heater high limit • Bad water heater • Humidity setpoint too low • No water in pan 	<ul style="list-style-type: none"> • Replace float switch • Replace high limit • Check heater and replace if bad; see Tech Mode item 18 • Increase Humidity Setpoint (SP-4) in Special Program Mode • Check water shut-off valve • Clean water valve and replace if necessary • Replace auto water relay
HEATING SYSTEM		
A. Unit not heating	<ul style="list-style-type: none"> • Bad control board • Bad high limit • Bad air heater or blower relays • Bad air heater • Faulty wiring • Blown fuse 	<ul style="list-style-type: none"> • Replace control board • Check high limit; replace if bad • Replace relay • Check heaters and replace if bad; see Tech Mode item 18 • Check for loose connections or broken wires • Change 15 amp fuse
B. Unit not reaching set temperature	<ul style="list-style-type: none"> • Blower not working • Bad air heater • Bad air heater, or blower relays • Doors left open • Door gasket torn or worn 	<ul style="list-style-type: none"> • Check blower and replace if bad See Tech Mode item 18 • Check heaters and replace if bad See Tech Mode item 18 • Replace relay • Keep doors closed except to load and serve product • Replace bad door gaskets

1-3. TROUBLESHOOTING (continued)

Problem	Cause	Correction
HEATING SYSTEM (Continued)		
C. Unit Overheating ("E-5")	<ul style="list-style-type: none"> • Blower not working • Bad control board • Relay stuck closed 	<ul style="list-style-type: none"> • Check blower and replace if bad; see Tech Mode item 18. • Replace control board • Replace relay

1-4. ERROR CODES AND WARNINGS

The display shows the following error codes and warnings when a fault is detected, along with an alarm sound. Both the heat and humidity systems shut down, except when specified otherwise.

Display	Cause	Panel Board Correction
“E-4 CPU TOO HOT”	<ul style="list-style-type: none"> Control board too hot; unit overheating or louvers clogged 	<ul style="list-style-type: none"> Turn switch to OFF position, then back to ON; if display still shows “E-4”, the PC board is getting too hot; clean louvers and check cooling fan; replace cooling fan if necessary; once panel cools down, the controls should return to normal; if “E-4” persists, have the PC board replaced.
“E-5 AIR TEMP TOO HOT”	<ul style="list-style-type: none"> Faulty relay, PC board, or air probe 	<ul style="list-style-type: none"> Turn switch to OFF position, then back to ON; if display shows “E-5”, check the heating circuits and temperature probe; once the unit cools down, the controls should return to normal; if “E-5” persists, replace the PC board
“E-54A CPU TEMP SENSOR OPEN”	<ul style="list-style-type: none"> Faulty PC board 	<ul style="list-style-type: none"> Turn switch to OFF position, then back to ON; if display shows “E-54A”, the control should be re-initialized (see Programming Section); if the error code persists, have PC board replaced.
“E-54B CPU TEMP SENSOR SHORTED”	<ul style="list-style-type: none"> Faulty PC board 	<ul style="list-style-type: none"> Turn switch to OFF position, then back to ON; if display shows “E-54B”, the control should be re-initialized (see Programming Section); if the error code persists, have PC board replaced.
“E-6A AIR TEMP SENSOR FAILED OPEN”	<ul style="list-style-type: none"> Faulty air probe 	<ul style="list-style-type: none"> Turn switch to OFF position, then back to ON; if the display shows “E-6”, the temperature probe should be checked; once the temperature probe is repaired, or replaced, the controls should return to normal; if “E-6” persists, have the PC board replaced

NOTICE

A humidity error only shuts down the humidity system. If a humidity error occurs, and you want to use the cabinet without humidity, turn the humidity off by following the directions for SP-4, Humidity Setpoint, in Special Programming Section of this manual. Once the setpoint is off, the alarm stops, but the error code shows in display. (Includes “E-12A”, “E-12B”, “E-17” and “E-18”).

1-4. ERROR CODES AND WARNINGS (Continued)

Display	Cause	Panel Board Correction
"E-6B AIR TEMP SENSOR FAILED SHORTED"	<ul style="list-style-type: none"> Faulty air temperature probe 	<ul style="list-style-type: none"> Turn switch to OFF position, then back to ON; if the display shows "E-6", the temperature probe should be checked; once the temperature probe is repaired, or replaced, the controls should return to normal; if "E-6" persists, have PC board replaced
"E-12A WATER HEATER SENSOR FAILED OPEN"	<ul style="list-style-type: none"> Faulty water heater probe 	<ul style="list-style-type: none"> Turn switch to OFF position, then back to ON; if the display shows "E-12A", the water heater should be checked and repaired or replaced (the water heater probe is built into the water heater); the controls should return to normal; if "E-12A" persists, have PC board replaced
"E-12B WATER HEATER SENSOR FAILED CLOSED"	<ul style="list-style-type: none"> Faulty water heater probe 	<ul style="list-style-type: none"> Turn switch to OFF position, then back to ON; if the display shows "E-12B", the water heater should be checked and repaired or replaced (the water heater probe is built into the water heater); the controls should return to normal; if "E-12B" persists, have PC board replaced
"E-17 HUMIDITY SENSOR FAILED"	<ul style="list-style-type: none"> Faulty humidity sensor 	<ul style="list-style-type: none"> Turn switch to OFF position, then back to ON; if the display shows "E-17", the humidity sensor should be checked; once the humidity sensor is repaired, or replaced, the controls should return to normal; if "E-17" persists, have PC board replaced
"E-18 NO WATER, FLOAT SWITCH FAILED"	<ul style="list-style-type: none"> Float switch stuck or faulty; faulty relay (stuck on); water pan needs cleaned; loose or faulty water heater sensor; acorn nuts on water heater cover loose, or water heater insulation missing or damaged 	<ul style="list-style-type: none"> Turn switch to OFF position, then back to ON; if the display shows "E-18", check and clean float switch; clean water pan; have relay and water heater sensor checked and replace if necessary; tighten acorn nuts on water heater cover; make sure 2 complete pieces of insulation are under the water heater cover; if "E-18" persists, have PC board replaced

NOTICE






A humidity error only shuts down the humidity system. If a humidity error occurs, and you want to use the cabinet without humidity, turn the humidity off by following the directions for SP-4, Humidity Setpoint, in Special Programming Section of this manual. Once the setpoint is off, the alarm stops, but the error code shows in display. (Includes "E-12A", "E-12B", "E-17" and "E-18").

**1-3. ERROR CODES AND
WARNINGS (Continued)**

Display	Cause	Panel Board Correction
"E-46 DATA SAVE FAILED"	<ul style="list-style-type: none"> • Memory scrambled 	<ul style="list-style-type: none"> • Follow directions for SP-9, System Initialization, in Special Programming Section of this manual; if "E-46" still persists, replace PC board.
"PLEASE DE-LIME WATER PAN"	<ul style="list-style-type: none"> • Water pan needs cleaned 	<ul style="list-style-type: none"> • Follow the weekly cleaning procedures in the Cleaning Procedures Section of the Operator's Manual; this warning will <u>not</u> shut down the heat or humidity
"WATER LEVEL LOW, PLEASE ADD WATER"	<ul style="list-style-type: none"> • Float switch stuck or faulty; relay faulty (stuck on); water pan needs cleaned; loose or faulty water heater sensor 	<ul style="list-style-type: none"> • Check float switch and replace if necessary; check relay and replace if necessary; follow weekly cleaning procedures in Cleaning Procedures Section of Operator's Manual; check wires at water heater and replace water heater if necessary (sensor is part of the water heater)

1-4. INFO MODE

This mode records historic information on the holding cabinet and operator performance, which could help in troubleshooting a problem.


Press  and  at the same time and “*INFO MODE*” shows on display. Press  or  to access the steps and press  to view the statistics within each step.

Information Mode is intended for technical use, but the Operator can view the following information:


1. Error log - last 10 errors and time they occurred
2. Power up log - time of last 10 power-ups
3. Outputs/Inputs - shows the state of unit’s inputs and outputs
 - a. OUT S_F_W_A (solenoid, fan, water heater, air heater, relay order from left to right)
 - b. AMPS S_F_W_A_
 - c. NC/GD S_F_W_A_ (no connect/ground detection on outputs to relays)
 - d. All outputs and inputs S_F_W_A_ P_ (power switch input) F_ (float switch input)
4. CPU temperature
5. Cabinet air temperature
6. Water heater temperature
7. Humidity counts value
10. Humidity value
11. Analog inputs


1-4. INFO MODE (Continued)


1. E-LOG (error code log)

Press  and "1A. (date & time) *NOW*" shows in display.


This is the present date and time.

Press  and if a error was recorded, "1B. (date, time, and error code information)" shows in display. This is the latest error code that the controls recorded.


Press  and the next latest error code information can be seen. Up to 10 error codes ("1B" to "1K") can be stored in the E-LOG Section.

Press  to continue to P-LOG.

2. P-LOG (power-up log)


Press  and "2A. (date & time) *NOW*" shows in display.

This is the present date and time.


Press  and the latest power-up is shown, "2B. (date, time,) PWR-UP".

Press  and the next latest power-up date is shown. Up

to 10 power-ups (2B to 2K) can be stored in the P-LOG section.

Press  to continue onto the outputs/inputs.

3. OUTPUTS/INPUTS

This mode displays the status of components and inputs. If the input or output signal is detected, an identifying letter is displayed (see below). If the signal is not detected, "_" is displayed. Press  to view the following:

- a. "S_F_W_A_" shows in the display. If the output is on, "*" shows beside the output letter. Ex: "S*". If the control senses a problem with the output, "*" flashes.
- b. "AMPS S_F_W_A_" shows in the display. A Checkmark ("√") beside the letter indicates normal amps. A flashing "X" beside the letter means a problem exists.
- c. "NC/GD S_F_W_A_" shows in the display. This monitors a possible problem with the relays on the output PC board. A Checkmark ("√") beside the letter indicates means everything on the output PC board is good. A flashing "X" beside the letter means a problem exists.

1-4. INFO MODE (Continued)

3. OUTPUTS/INPUTS (Continued)

d. “S_F_W_A_ P_F_” shows in the display. If the output or input signal is detected, “*” shows beside the letter. Ex: “S*”. If the control senses a problem with the output, “*” flashes.

Press  to continue onto CPU TMP.

4. CPU TMP

This step shows the present PC board temperature.

Press  to continue onto cabinet air temperature.

5. CABINET AIR TMP

This step shows the present air temperature inside the cabinet.

Press  to continue onto water heater temperature.

6. WATER HEATER TMP

This step shows the present water heater temperature.

Press  to continue to humidity counts value.


7. HUMIDITY COUNTS VALUE

Factory use only!

Press  to continue onto the humidity value.


8. HUMIDITY VALUE

This step shows the present humidity level inside the cabinet.

Press  to continue onto the analog inputs.

9. ANALOG INPUTS

This step displays the present status of any channel of the controller's a to d converter. This feature may be useful to a technician troubleshooting a problem with the controller.


The displayed value can be toggled between Volts and Bits by pressing . If the displayed value has a decimal point, it is voltage (0 to 5 VDC). If no decimal point is shown, the value is a-to-d bits (0 - 4095).

SECTION 2. LEVEL 2 PROGRAMMING

2-1. INTRODUCTION

The Tech Mode and Stats Mode in the Level 2 Programming Section, have information that could help in troubleshooting a problem with the unit.



2-2. TECH MODE

Press  **PROG** and hold until “L-2 LEVEL 2”, followed by, “SP PROG”, shows in display.

Press  **PROG** 3 times and “TECH”, followed by, “ENTER CODE” shows in display.

Enter code,         to access the following items:

- T-1 Software
- T-2 Cabinet version
- T-3 Push button test
- T-4 All on display test
- T-5 Segments test
- T-6 Digits test
- T-7 Decimal points test
- T-8 LED's test
- T-9 Air temperature - circuit calibration
- T-10 Air temperature - user calibration/offset/highest value
- T-11 Water heater temperature - circuit calibration
- T-12 Water heater temperature - user calibration/offset/highest value
- T-13 Humidity - circuit calibration
- T-14 Humidity sensor - calibration/offset; specific value sent with each humidity sensor
- T-15 Humidity- user calibration/offset/highest value
- T-16 CPU° - Control temperature - highest value
- T-17 View ADC channel
- T-18 Outputs/inputs; on outputs steps use the following hidden buttons [1-5] to toggle on the outputs; [2] - solenoid valve, [3] - circulation fan, [4] - water heater, [5] - air heater.
- T-19 Total init – initialization of programming areas and statistics.

 **PROG** moves you forward through the above selections and  **INFO** moves you backwards through the selections.

2-2. TECH MODE (Continued)

T-1: Software

This section shows “PN/ID/SRL”

Press **1**. Henny Penny eeprom part number is displayed.

Press **2**. Customer ID (i.e. Pizza Hut) is displayed

Press **3**. Software revision is displayed.

T-2: Cabinet Version

Shows the model number, e.i. HHC-983

T3: Push Button Test

Press any button on the control and a digital display feedback confirms the button is working

T4: All On Display Test

Press any of the product buttons and every LED on the 16 digit display lights

T5: Segments Test

Repeatedly pressing any product button lights one segments in every one of the 16 digit displays

T6: Digits Test

Repeatedly pressing any product button lights all segments in one of the 16 digital displays (scrolls though all 16)

T7: Decimal Point Test

Repeatedly pressing any product button lights a decimal point (DP) in one of the 16 digital displays (scrolls though all 16)

T8: LED Test

Repeatedly pressing any product button lights individual LEDs (scrolls though all LEDs)



T9: Air Temperature - Circuit Calibration

Factory use only

2-2. TECH MODE (Continued)


T10: Air Temperature - Calibration/Offset/Highest

A user calibration to make sure the display shows the actual air temperature

Press and hold **1** and use   to set the display to match the actual temperature. (+/-15° F)

Press and hold **2** to change the amount of the offset.(+/-15° F)

Press and hold **3** to view the highest air temperature recorded.



Press  to reset highest temperature.

T11: Water Heater Temperature - Circuit Calibration

Factory use only

T12: Water Heater Temperature - Calibration/Offset/Highest

A user calibration to make sure the display shows the actual water heater temperature

Press and hold **1** and use   to set the display to match the actual temperature. (+/-15° F)

Press and hold **2** to change the amount of the offset.(+/-15° F)

Press and hold **3** to view the highest air temperature recorded.

Press  to reset highest temperature.

T13: Humidity - Circuit Calibration

See Humidity Sensor Calibration and Replacement Section



T14: Humidity Sensor - Calibration/Offset

A specific value that is sent with the humidity sensor, when necessary; otherwise, this value should be 0

2-2. TECH MODE (Continued)


T15: Humidity - Calibration/Offset/Highest

A user calibration to make sure the display shows the actual humidity inside the cabinet

Press and hold **1** and use   to set the display to match the actual temperature. (+/-15°F)

Press and hold **2** to change the amount of the offset.(+/-15°F)

Press and hold **3** to view the highest air temperature recorded.

Press  to reset highest temperature.

T16: CPU° - Control Temperature - Highest Value

Shows the highest temperature the control board was exposed to

T17: View ADC Channel

Factory use only

T18: Outputs/Inputs


The following components can be tested:

- 1** toggles the solenoid off and on.
- 2** toggles the cooling fan off and on.
- 3** toggles the water heater off and on.
- 4** toggles the air heaters off and on.

T19: Total Initialization

Completely resets any accumulated information and changed settings in the controls; contact Henny Penny Corp. before completing this step!



2-3. STATS MODE

Press  and hold until “L-2 LEVEL 2”, followed by, “SP PROG”, shows in display.

Press  4 times and “STATS”, followed by, “ENTER CODE” shows in display.

Enter code,         to access the following items:

- ST-1 Power live hours
- ST-2 Power on hours
- ST-3 Power-ups count
- ST-4 Errors count
- ST-5 Air heat on hours
- ST-6 Water heater on hours
- ST-7 Circulation fan on hours
- ST-8 Water solenoid on hours
- ST-9 Solenoid cycle count
- ST-10 Longest solenoid on time; maximum=5 minutes
- ST-11 Highest air temperature
- ST-12 Highest water heater temperature
- ST-13 Highest humidity value
- ST-14 Highest CPU temperature
- ST-15 Water heater (too hot) cycle count
- ST-16 Sys ram – Fade count
- ST-17 Hold RAM – Fade count
- ST-18 Stat RAM – Fade count
- ST-19 Ram data error count
- ST-20 Data total loss count
- ST-21 User init’s count
- ST-22 Auto init’s count
- ST-23 Error log
- ST-24 Power up log
- ST-25 Heat up log
- ST-26 Reset all stats

 moves you forward through the above selections and  moves you backwards through the selections.

INFO

2-3. STATS MODE (Continued)

ST-1: Power Live Hours

Shows the number of hours the unit has been plugged in

ST-2: Power On Hours

Shows the number of hours the control has been on

ST-3: Power Ups Count

Shows the number of times the control has been turned on

ST-4: Errors Count

Shows the total number of all errors (displayed on control) that have occurred with the unit

ST-5: Air Heat On Hours

Shows the number of hours the air heaters have been on

ST-6: Water Heater On Hours

Shows the number of hours the water heater has been on

ST-7: Circulation Fan On Hours

This section shows the number of hours the cooling fan has been on.

ST-8: Water Solenoid On Hours

Shows the number of hours the solenoid has been on

ST-9: Solenoid Cycle Count

Shows the number of times the solenoid has been turned on

ST-10: Longest Solenoid 'On' time. Maximum 5 minutes.

Shows the longest the solenoid has been on at any one time, to a maximum of 5 minutes

ST-11: Highest Air Temperature

Shows highest air temperature sensed by the temperature probe

ST-12: Highest Water Heater Temperature

Shows the highest water heater temperature, sensed by the water heater temperature sensor

2-3. STATS MODE (Continued)

ST-13: Highest Humidity Value

Shows the highest humidity value sensed by the humidity sensor

ST-14: Highest CPU Temperature

Shows the highest control board temperature sensed by the control

ST-15: Water heater (too hot) cycle count

Shows the number of times the water heater has gotten too hot

ST-16: System Ram - Fade Count

Shows the number of times the system memory has been lost during power up; ex: °F or °C, or speaker volume

ST-17: Hold Ram - Fade Count

Shows the number of times the hold memory has been lost during a power up; may be lost at a power up, after a power loss, during a holding cycle

ST-18: Stat Ram - Fade Count

This section shows the number of times the Stats memory has been lost during power up; the information in the Stats Mode is updated every two hours, and this count lets you know that the updates were lost

ST-19: Ram Data Error Count

Shows the number of times the data was lost while operating, not during power up (should be a low number)

ST-20: Data Total Loss Count

Shows the number of times the data stored in the Eprom has been lost; should see an "E-41" error code when this occurs

ST-21: User Init's Count

Shows the number of times the operator has initialized the controls

ST-22: Auto Init's Count

Shows the number of times the controls have automatically reset

ST-23: Error Log

Records the last 10 errors and the time they occurred; press





to view the log

2-3. STATS MODE (Continued)

ST-24: Power Up Log

Records the last 10 power ups and when they occurred; press

  to view the log

ST-25: Heat Up Log

Records the last 10 heat ups between 250° F (121° C) to 300° F (149° C), when they occurred, and how long (seconds) it took;

press   to view the log

ST-26: Resets All Stats

Allows the user to reset all data stored in the Stats Mode; press and hold  for 3 seconds

**2-4. DATA LOGGING AND
MANUFACTURING
MODE**

The Data Logging and Manufacturing Modes are mainly for Henny Penny use only. For more information on these modes, contact the Service Department at 1-800-417- 8405, or 1-937-456-8405.

SECTION 3. MAINTENANCE

3-1. INTRODUCTION

This section provides procedures for the checkout and replacement of the various parts used within the merchandiser. Before replacing any parts, refer to the Troubleshooting section. It will aid you in determining the cause of the malfunction.

3-2. MAINTENANCE HINTS

1. You may want to use a multimeter to check the electric components.
2. When the manual refers to the circuit being closed, the multimeter should read zero unless otherwise noted.
3. When the manual refers to the circuit being open, the multimeter reads infinity.

3-3. HUMIDITY SENSOR CALIBRATION AND REPLACEMENT

The Humidity Sensor relays the cabinet humidity to the controls. If it becomes faulty, “E-17”, then “HUMIDITY SENSOR FAILED” shows on the display. Replace sensor as follows:



To avoid electrical shock or property damage, move the power switch to OFF and disconnect main circuit breaker, or unplug cord at wall receptacle.

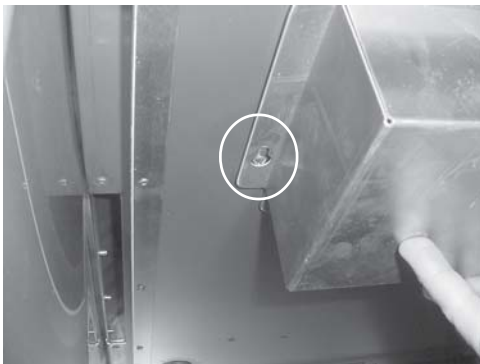


Figure 3-1



Figure 3-2

Replacement:

1. Open top, operator side door of full-size units, or operator door of 1/2 size units.
2. Using a Phillip’s head screwdriver, remove the front screw and loosen the 2 side screws securing the sensor cover. Slide cover towards you and off loosened screws.
Figure 3-1
3. Using a Phillip’s head screwdriver, remove the 4 screws securing the sensor to the box. Figure 3-2.

**3-3. HUMIDITY SENSOR
CALIBRATION AND
REPLACEMENT
(Continued)**

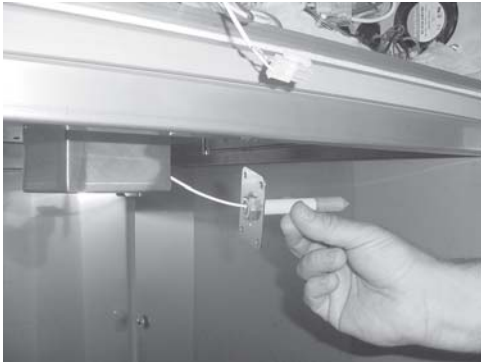


Figure 3-3

4. Pull the sensor assembly from the box and disconnect the wires. Figure 3-3.
5. Connect wires of new sensor and attach the sensor to the box. Follow the calibration instructions below before re-attaching the sensor cover.
6. Once the calibration is complete, slide the cover over the Phillip’s head screws and tighten. Unit is now ready for use.

Calibration:

Calibrate the humidity sensor after a sensor or control replacement. A calibration board is supplied with each control kit and humidity sensor kit, but can also be ordered separately with part number, 14391.

1. If not already done, open the cabinet door, and remove the humidity sensor cover at top of unit. (See step 2, page 3-1.)
2. While holding the white tube, unscrew the silver cap from the humidity sensor.
3. Remove the two pronged sensor by grasping the edges. Figure 3-4.

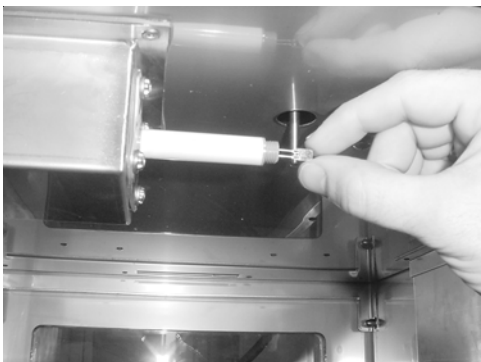




Figure 3-4

NOTICE

Use caution not to touch the flat edge, as it will throw the reading off.

4. Push and hold  until “Level 2” appears in display.
PROG
5. Press  to step through the menu until “TECH’ is displayed.
PROG

**3-3. HUMIDITY SENSOR
CALIBRATION AND
REPLACEMENT
(Continued)**

- Using the hidden buttons, (Figure 3-5), enter code of 11221122. (Hidden buttons 1 through 5 left to right)

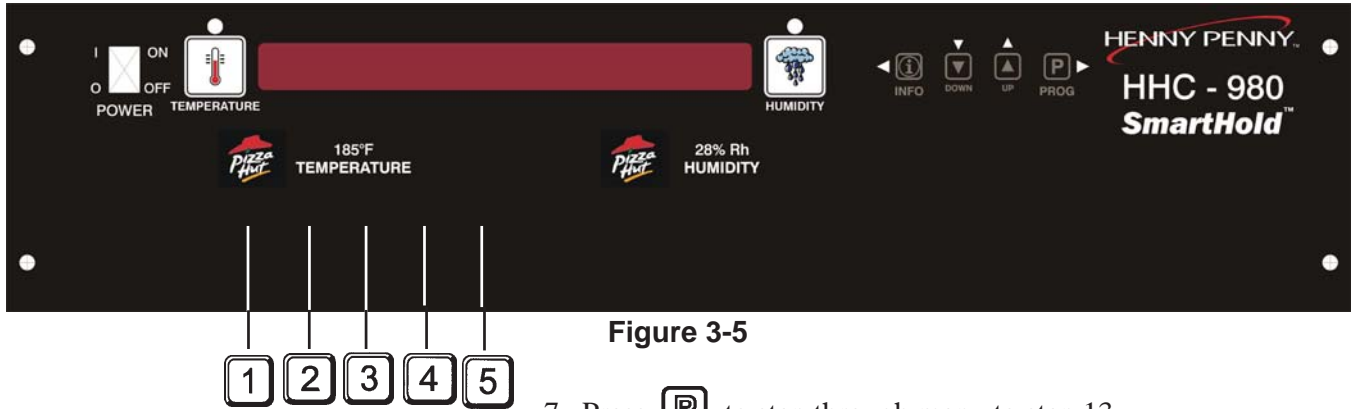


Figure 3-5



Figure 3-6

- Press **PROG** to step through menu to step 13.
- Insert the two prongs of the calibration board marked 20% into the humidity sensor. Figure 3-6.
- Press and hold the hidden button **1**, then press **DOWN**. Release both buttons. 20% should then show in display.
- Reverse calibration board and insert the two prongs marked 80% into humidity sensor.
- Push and hold the hidden button **2** then press **DOWN**. Release both buttons. 80% should then show in display.
- Push the (P) button to step 14 on models 983 & 980, or to step 16 on models 993, 990, 996, & 998.
- Find the offset number on the mounting plate of the humidity sensor.

NOTICE

When changing the control board on units with serial number IV178JB and below, no offset will be found. Leave offset at 0.

- Push and hold the hidden button “2”, then push the UP or DOWN arrows to enter the offset number.
- Press and hold **PROG** to exit TECH mode.
- Reinstall two pronged sensor into humidity sensor.
- Reinstall silver cap and sensor cover, and unit is now ready for use.

3-4. FUSE AND FUSE HOLDER ASSEMBLY

If the unit (non-CE) is completely inoperative, but power exists at the wall receptacle, check the 15 amp fuse(s) and fuse holder(s) as follows:



To avoid electrical shock or property damage, move the power switch to OFF and disconnect main circuit breaker, or unplug cord at wall receptacle.

Checking Fuse(s)

1. Unscrew the fuse holder cap by turning it counterclockwise. (Located under the power cord.) Figure 3-7.
2. Pull the fuse from the cap and check for continuity by placing the leads of a multimeter or continuity light on opposite ends of the fuse. The fuse should show closed or read no resistance. If fuse is defective, replace it with a new one. Be sure replacement fuse is identical to the one being replaced. (208 or 240 volt units have 2 fuses and both should be checked.)



Figure 3-7

Checking Fuse Holder(s)

If fuses show good, the fuse holders may be bad. Check the fuse holders as follows:



To avoid electrical shock or property damage, move the power switch to OFF and disconnect main circuit breaker, or unplug cord at wall receptacle.

1. Remove the screws securing the rear access panel and pull panel down.
2. Remove the wires from the fuse holder, and check for continuity by placing the leads of a multimeter or continuity light on terminals of the fuse holder. The fuse holder should show closed or read no resistance. Figure 3-8.
3. If fuse holder shows it's defective, remove the screws securing it to the panel and replace it with a new one. Figure 3-9.
4. Reinstall the rear panel and make sure the fuse holder has a 15 amp fuse in it.
5. Restore power to the cabinet and it's now ready for use.

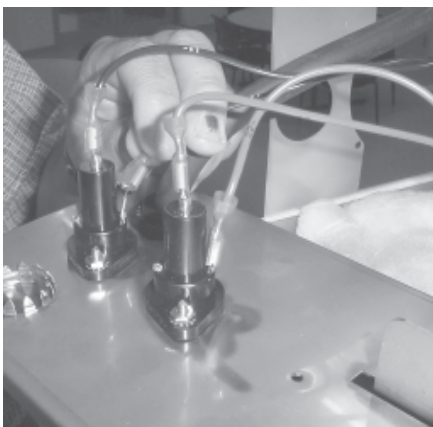


Figure 3-8



Figure 3-9

3-5. POWER SWITCH REPLACEMENT



To avoid electrical shock or property damage, move the power switch to OFF and disconnect main circuit breaker, or unplug cord at wall receptacle.

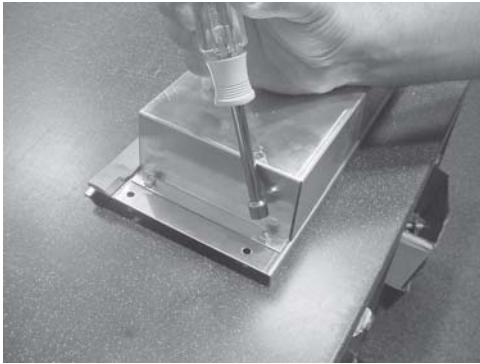


Figure 3-10

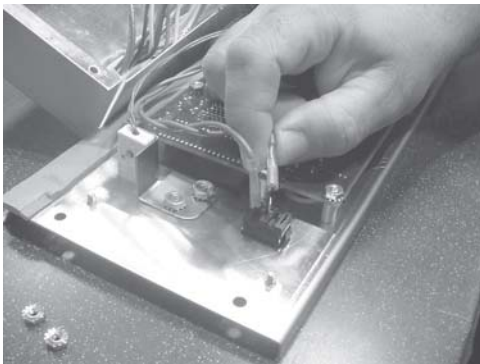


Figure 3-11

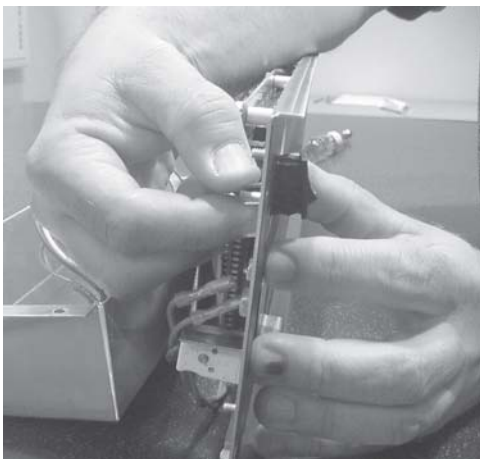


Figure 3-12

1. Using a Phillip's head screwdriver, remove the four screws securing the front panel.
2. Pull panel down, pull connectors from the back of it, and remove panel from unit.
3. Using 5/16" socket, remove the 4 nuts securing the control cover and remove cover. Figure 3-10.
4. Pull wires from switch and check across the 2 terminals for continuity. Figure 3-11. With switch in ON position, the circuit should be closed. In the OFF position the circuit should be open. If the switch is defective, continue with step 5.
5. Pinch the tabs on the rear of the switch and pull the switch through the front of the panel. Figure 3-12.
6. Replace with new switch in reverse order and unit is now ready for use.

3-6. AIR TEMPERATURE PROBE REPLACEMENT



To avoid electrical shock or property damage, move the power switch to OFF and disconnect main circuit breaker, or unplug cord at wall receptacle.

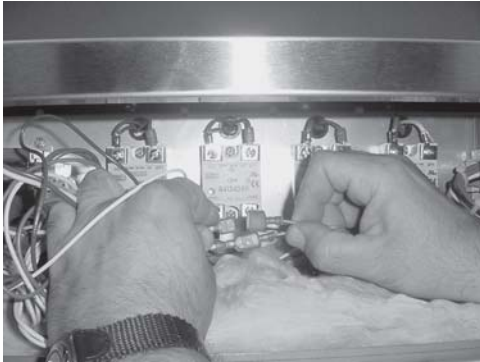


Figure 3-13

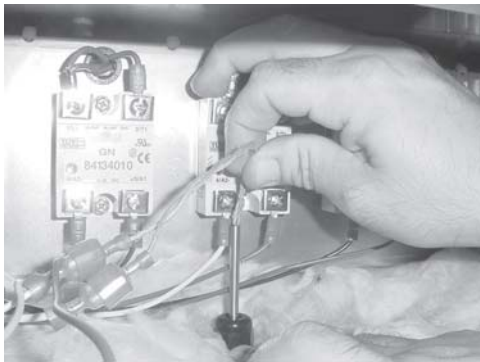


Figure 3-14



Figure 3-15

1. Using a Phillip's head screwdriver, remove the four screws securing the front panel.
2. Pull panel down, pull connectors from the back of it, and remove panel from unit.
3. Unplug the wires to the probe. Figure 3-13.
4. Using a multimeter, or ohmmeter, check across the probe terminals for the correct ohms using the RTD Resistance Chart on the following page. If the probe proves faulty, continue onto step 5.
5. Using a 3/4" wrench, loosen probe strain relief and pull the probe from the unit. Figure 3-14.
6. Slide new probe through the strain relief, extending the probe about 1" (25.4 mm) into the cabinet area. Figure 3-15.
7. Plug probe wires to the unit, tighten the strain relief, and replace front panel. Unit is now ready for use.

3-7. TRANSFORMER REPLACEMENT



To avoid electrical shock or property damage, move the power switch to OFF and disconnect main circuit breaker, or unplug cord at wall receptacle.

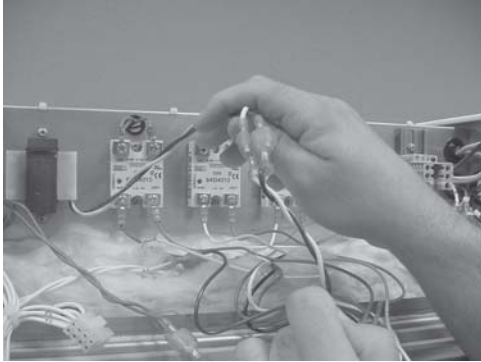


Figure 3-16



Figure 3-17

1. Using a Phillip's head screwdriver, remove the four screws securing the front panel.
2. Pull panel down, pull connectors from the back of it, and remove panel from unit.
3. Label wires to transformer and unplug wires to transformer. Figure 3-16.
4. Using a Phillip's head screwdriver, remove the 2 screws securing the transformer and pull transformer from unit. Figure 3-17.
5. Install new transformer in reverse order and unit is now ready for use.

3-8. RELAY REPLACEMENT



To avoid electrical shock or property damage, move the power switch to OFF and disconnect main circuit breaker, or unplug cord at wall receptacle.

Checkout:

1. Using a Phillip's head screwdriver, remove the four screws securing the front panel.
2. Pull panel down, pull connectors from the back of it, and remove panel from unit.



The following checks are performed with the wall circuit breaker closed and the main power switch in the ON position. Extreme caution should be taken. Make connections before applying power, take reading, and remove power before removing meter leads, or electrical shock could result.

3. With power reappplied, let unit start heating up, or enter the Tech Mode in Special Program Mode and check the relays in the output test. (See T-18 in the Tech Mode Section)
4. With the component energized (example: air heaters), 0 volts should show on the output side of the relay, and 12 volts on the input side.
5. With the component not energized, 208 or 240 volts should show on the output side of relay, and 0 volts on input.
6. If voltage varies from steps 4 and 5, remove power to unit, pull input wires from relay and place leads of meter onto input wires. Reapply power to unit. When unit is running, the input wires to relay should show 12 vdc volts. If this proves true, the relay is faulty and continue onto step 7.

3-8. RELAY REPLACEMENT **(Continued)**



Figure 3-18

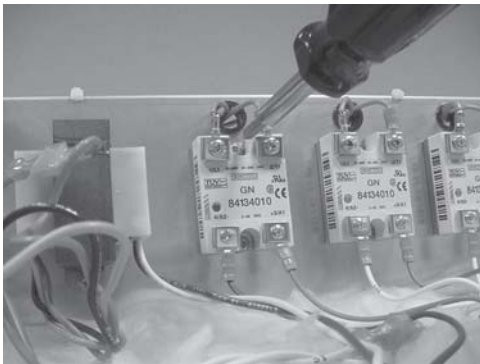


Figure 3-19

3-9. MODULE TOP **REMOVAL**



Figure 3-20



Figure 3-21

7. Label wires and then remove wires from relay using a Phillip's head screwdriver. Figure 3-18.
8. Using a Phillip's head screwdriver, remove the 2 screws securing the relay and remove relay from unit. Figure 3-19.
9. Coat the back of the relay with the thermal joint compound.

CAUTION

Failure to use the thermal joint compound will shorten the life of the relay.

10. Install new relay in reverse order and unit is now ready for use.



To avoid electrical shock or property damage, move the power switch to OFF and disconnect main circuit breaker, or unplug cord at wall receptacle.

1. Using a Phillip's head screwdriver, remove the module screws from the side. Figure 3-20.
2. Remove screws from front and rear panels.
3. Pull module top from module. Figure 3-21.

3-10. COOLING FAN REPLACEMENT

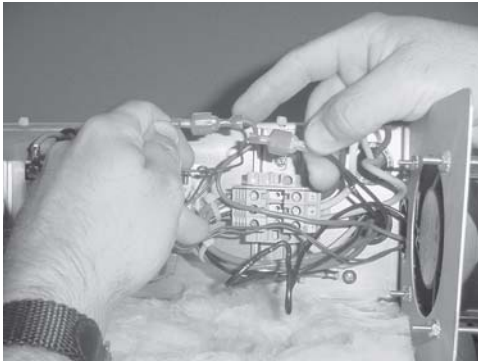


Figure 3-22

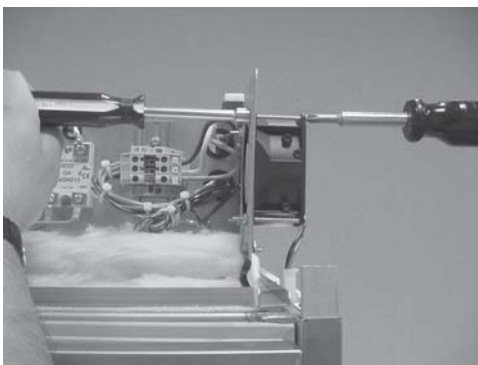


Figure 3-23

3-11. HIGH LIMIT-AIR HEATER REPLACEMENT

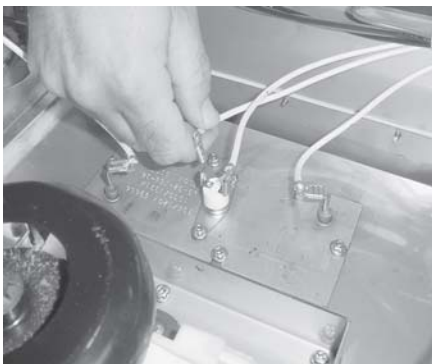


Figure 3-24



Figure 3-25



To avoid electrical shock or property damage, move the power switch to OFF and disconnect main circuit breaker, or unplug cord at wall receptacle.

1. Refer to section 3-10 for module top removal.
2. Unplug connectors to the cooling fan. Figure 3-22.
3. Remove screws and nuts securing the fan and remove fan from module. Figure 3-23.
4. Install new fan in reverse order and unit is now ready for use.



To avoid electrical shock or property damage, move the power switch to OFF and disconnect main circuit breaker, or unplug cord at wall receptacle.

1. Follow the instructions in section 3-10 on removing the module top.
2. Remove wires from high limit. Figure 3-24.
3. Check across the terminals for continuity. If the unit is not heating, the circuit should be closed, or read no resistance. If high limit is defective, continue onto step 4.
4. Remove the 2 screws securing the high limit and remove high limit. Figure 3-25.
5. Install new high limit in reverse order and unit is now ready for use.

3-12. BLOWER MOTOR REPLACEMENT



To avoid electrical shock or property damage, move the power switch to OFF and disconnect main circuit breaker, or unplug cord at wall receptacle.



Figure 3-26



Figure 3-27



Figure 3-28

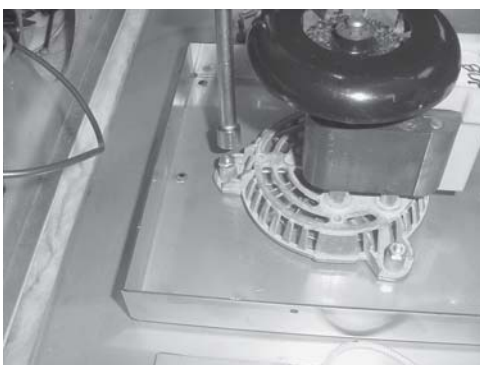


Figure 3-29

1. Follow the instructions in section 3-10 on removing the module top.
2. Unplug wires to blower motor. Figure 3-26.
3. Using a Phillip's head screwdriver, remove the screws securing the blower bracket to the module. Figure 3-27.
4. Pull bracket from module. Loosen set screw on fan blade and pull blade from blower. Figure 3-28.
5. Remove the 3 nuts securing the blower to the bracket and remove blower motor. Figure 3-29.
6. Install new blower in reverse order, and unit is now ready for use.

3-13. AIR HEATER REPLACEMENT



Figure 3-30

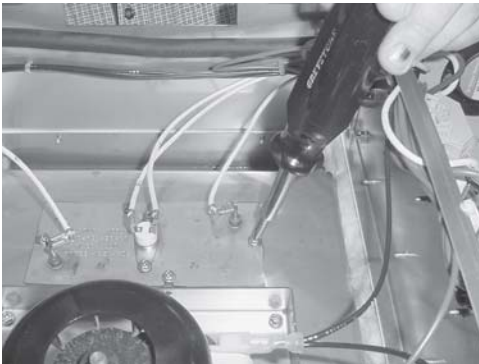


Figure 3-31

3-14. SPEAKER REPLACEMENT



Figure 3-32

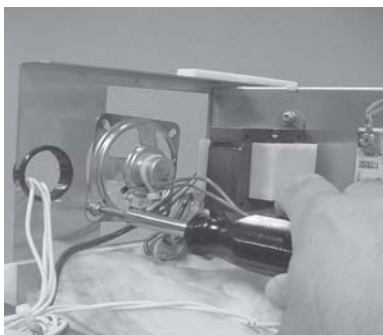


Figure 3-33



To avoid electrical shock or property damage, move the power switch to OFF and disconnect main circuit breaker, or unplug cord at wall receptacle.

1. Follow the instructions in section 3-10 on removing the module top.
2. Unplug the wires to the heater and high limit. Figure 3-30.
3. Using a Phillip's head screwdriver, remove the 4 screws securing the heater and remove heater. Figure 3-31.
4. Install new heater in reverse order and unit is now ready for use.



To avoid electrical shock or property damage, move the power switch to OFF and disconnect main circuit breaker, or unplug cord at wall receptacle.

1. Remove the 4 screws securing the front panel.
2. Pull connectors from back of panel and remove panel.
3. Unplug wires to speaker. Figure 3-32.
4. Using a Phillip's head screwdriver, remove the screws securing the speaker and remove speaker. Figure 3-33.
5. Install new speaker in reverse order and unit is now ready for use.

3-15. COMPLETE PANEL OR PC BOARD REPLACEMENT

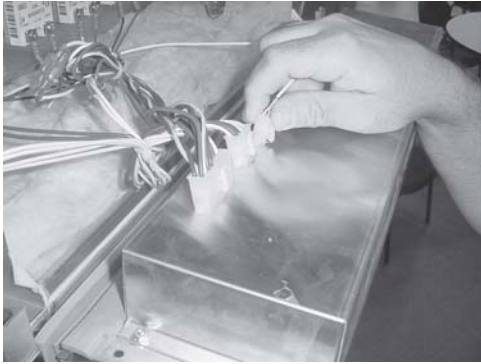


Figure 3-34

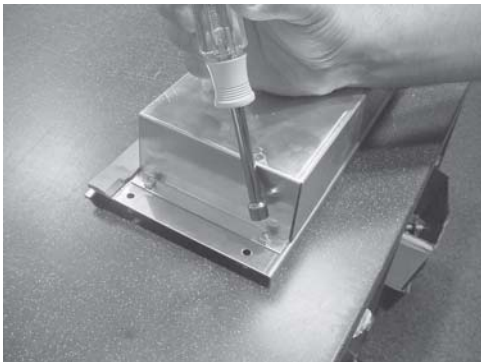


Figure 3-35

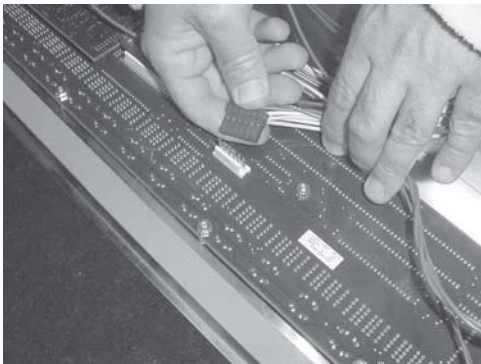


Figure 3-36



Figure 3-37



To avoid electrical shock or property damage, move the power switch to OFF and disconnect main circuit breaker, or unplug cord at wall receptacle.

The complete control panel assembly can be replaced, or just the PC board. Follow steps 1 & 2 for the complete panel and continue with the remaining steps for the PC Board replacement.

1. Remove the 4 screws securing the front panel.
2. Pull connectors from back of panel and remove panel. Figure 3-34 Install complete panel in reverse order. When installing the PC board, continue to step 3.
3. Using 5/16" socket, remove the 4 nuts securing the control cover and remove cover. Figure 3-35.
4. Pull the connectors from PC Board. Figure 3-36.
5. Using 5/16" socket, remove the 8 nuts securing the PC board and remove board. Figure 3-37.
6. Install new PC board in reverse order and unit is now ready for use.

3-16. FLOAT SWITCH REPLACEMENT



Figure 3-38

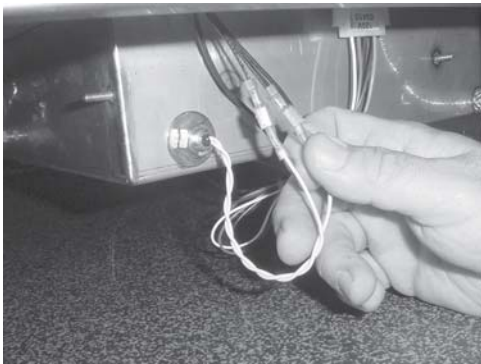


Figure 3-39



Figure 3-40



Figure 3-41



To avoid electrical shock or property damage, move the power switch to OFF and disconnect main circuit breaker, or unplug cord at wall receptacle.

1. Disconnect water supply at side of cabinet. Open drain valve and empty water pan into a shallow pan or floor drain. Figure 3-38.



Hot water! Do not place your hand under the drain while draining the unit. Failure to follow this warning could result in severe burns and injury.

2. Unplug wires to float switch. Figure 3-39.

3. Remove nut securing the float switch and pull float switch from unit. Figure 3-40.

4. Install new float switch in reverse order, making sure float switch is in upright position. Figure 3-41.

5. Reconnect water supply and unit is now ready for use..

3-17. HIGH LIMIT - WATER HEATER REPLACEMENT



To avoid electrical shock or property damage, move the power switch to OFF and disconnect main circuit breaker, or unplug cord at wall receptacle.



Figure 3-42

1. Disconnect water supply at side of cabinet. Open drain valve and empty water pan into a shallow pan or floor drain.

Figure 3-42.



Hot water! Do not place your hand under the drain while draining the unit. Failure to follow this warning could result in severe burns and injury.



Figure 3-43

2. Remove all doors and racks from unit and carefully lay the unit on its back. (This step may not be necessary for units on stands.)

3. Using an 11/32" socket or wrench, remove the nuts securing the water heater cover and remove cover. Figure 3-43.



Figure 3-44

4. Remove wire from high limit. Figure 3-44.

5. Check across the terminals for continuity. If the unit is not heating, the circuit should be closed, or read no resistance. If high limit is defective, continue onto step 6.

6. Remove the 2 nuts securing the high limit and remove high limit.

7. Install new high limit in reverse order.

8. Reconnect water supply and unit is now ready for use.

3-18. WATER HEATER REPLACEMENT

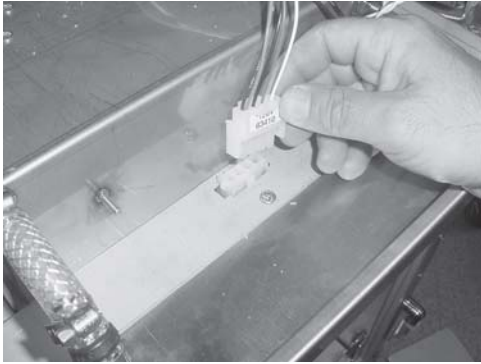


Figure 3-45

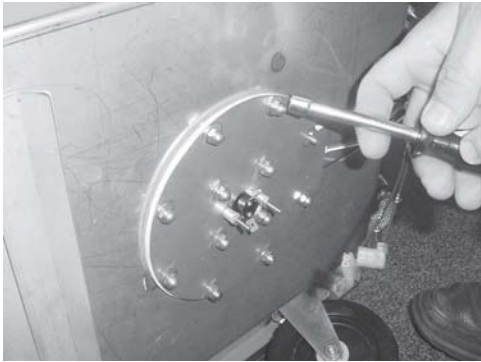


Figure 3-46

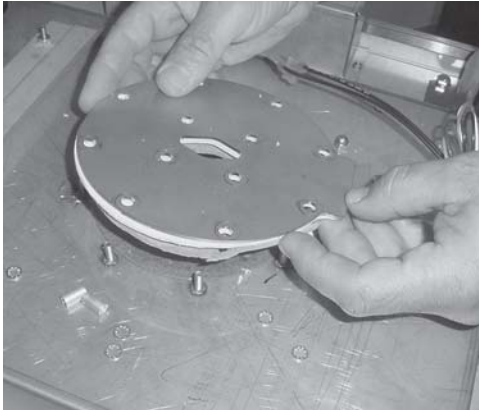


Figure 3-47



Figure 3-48



To avoid electrical shock or property damage, move the **POWER** switch to **OFF** and disconnect main circuit breaker, or unplug cord at wall receptacle.

1. Open drain valve and empty water pan into a shallow pan or floor drain. (See Figure 3-42 on page 3-16.)



Hot water! Do not place your hand under the drain while draining the unit. Failure to follow this warning could result in severe burns and injury.

2. Remove all doors and racks from unit and carefully lay the unit on its back. (This step may not be necessary for units on stands.)
3. Using an 11/32" socket or wrench, remove the nuts securing the water heater cover and remove cover. (See Figure 3-43 on page 3-16.)
4. Unplug water heater and high limit wires. Figure 3-45.
5. Remove the nuts securing the water heater plate and high limit, and pull high limit, plate, insulation and water pan heater from the unit. Figure 3-46.
6. Pull plate and insulation from unit and discard plate and insulation. Figure 3-47.
7. Pull water heater from unit. Figure 3-48.

**3-18. WATER HEATER
REPLACEMENT
(Continued)**

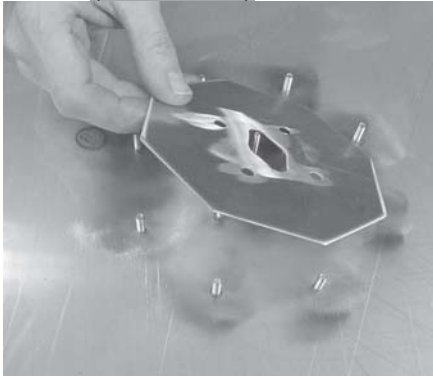


Figure 3-49



Figure 3-50

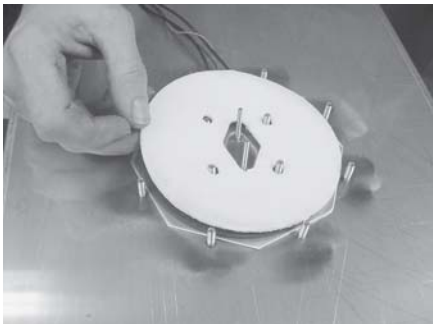


Figure 3-51

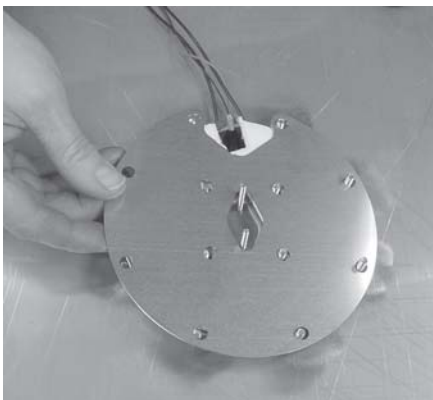


Figure 3-52

8. Locate the aluminum, octagon plate in the kit. Make sure the surface is free of debris and place the plate over the 4 long studs. Figure 3-49.

9. Install new heater, making sure the flat side is towards the plate and the soldered wires are exposed, as shown in Figure 3-50.

10. Install the new insulation from the kit, over the water pan heater. Figure 3-51.

11. Place new cover plate from the kit, over the insulation. Figure 3-52.

12. Locate the 12 keps nuts from the kit and place them over the studs and finger-tighten. Using an 11/32" socket or wrench, snug the nuts down in a cross-fashion, but DO NOT overtighten.

CAUTION

Overtightening the nuts could damage the coating on the heater, causing the heater to fail prematurely.

13. Reinstall high limit.

14. Reconnect high limit wires and water pan heater wires to unit.

15. Reinstall water heater cover and water supply, and unit is now ready for use.

3-19. DRAIN VALVE REPLACEMENT



To avoid electrical shock or property damage, move the power switch to OFF and disconnect main circuit breaker, or unplug cord at wall receptacle.

1. Disconnect water supply at side of cabinet. Open drain valve and empty water pan into a shallow pan or floor drain. (See Figure 3-42 on page 3-16.)



Hot water! Do not place your hand under the drain while draining the unit. Failure to follow this warning could result in severe burns and injury.

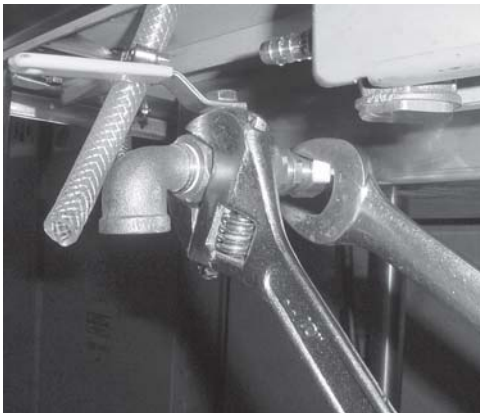


Figure 3-53

2. Remove all doors and racks from unit and carefully lay the unit on its back. (This step may not be necessary for units on stands.)
3. Loosen hose clamp on water hose and pull hose from water strainer.
4. Turn drain valve handle to open position (pointed outwards).
5. Using 2 wrenches, turn drain valve counterclockwise, while holding fitting behind it. Figure 3-53. Remove drain valve assembly from unit.
6. Remove elbow from valve.
7. Put pipe sealant on threads of elbow and install elbow in new drain valve.
8. Put pipe sealant on threads of fitting, and install new drain valve assembly onto fitting.
9. Reconnect water supply and unit is now ready for use.

3-20. CLEANING WATER STRAINER

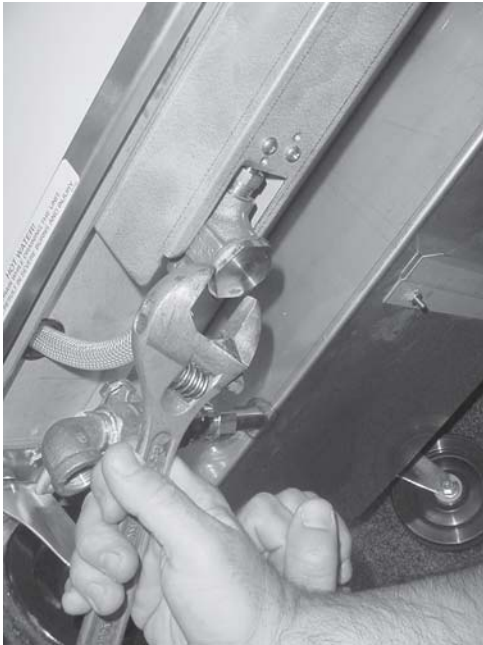


Figure 3-54



Figure 3-55

1. Disconnect water supply at side of cabinet.
2. Remove the hex cap at the bottom of the water strainer. Figure 3-54.
3. Remove the screen from inside the strainer and clean. Figure 3-55. If lime has built up on the strainer, clean with lime remover.
4. Reassemble in reverse order.
5. Reconnect water supply and check for leaks. If no leaks are found, unit is now ready for use.

3-21. WATER VALVE (SOLENOID) REPLACEMENT



To avoid electrical shock or property damage, move the power switch to OFF and disconnect main circuit breaker, or unplug cord at wall receptacle.

1. Disconnect water supply at side of cabinet. Open drain valve and empty water pan into a shallow pan or floor drain. (See Figure 3-42 on page 3-16.)

**3-21. WATER VALVE
(SOLENOID)
REPLACEMENT
(Continued)**



Hot water! Do not place your hand under the drain while draining the unit. Failure to follow this warning could result in severe burns and injury.

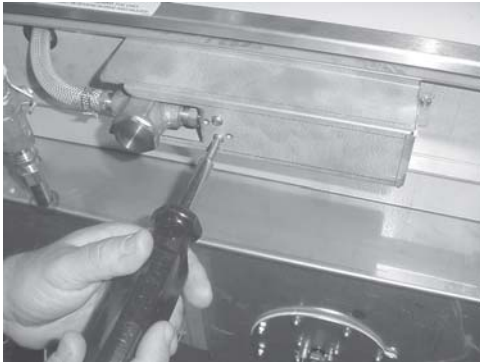


Figure 3-56

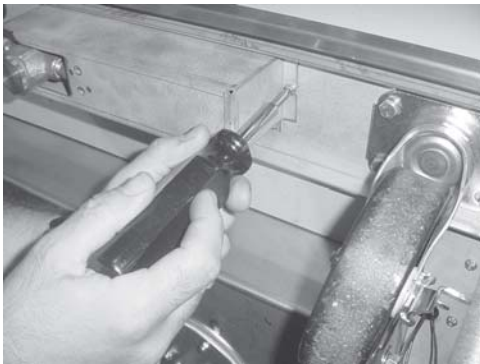


Figure 3-57



Figure 3-58



Figure 3-59

2. Remove all doors and racks from unit and carefully lay the unit on its back. (This step may not be necessary for units on stands.)
3. Using a Phillip's head screwdriver, remove the screws securing the solenoid to the cover. Figure 3-56.
4. Using a Phillip's head screwdriver, remove the screws securing the cover and remove cover. Figure 3-57.
5. Unplug the wires to the solenoid. Figure 3-58.
6. Loosen hose clamps and pull hoses from solenoid and the strainer. Figure 3-59.

3-21. WATER VALVE
(SOLENOID)
REPLACEMENT
(Continued)



Figure 3-60

7. Remove the fittings from both ends of the solenoid. Figure 3-60.
8. Put pipe sealant on threads and place fittings in new solenoid, making sure the strainer goes to the IN side of the solenoid. Figure 3-61, below.
9. Reinstall assembly in reverse order.
10. Reconnect water supply and check for leaks. If no leaks are found, unit is now ready for use.

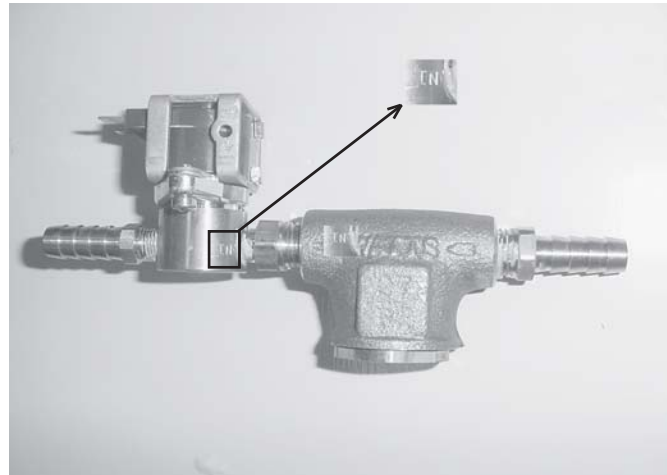


Figure 3-61

3-22. DOOR GASKET
REPLACEMENT

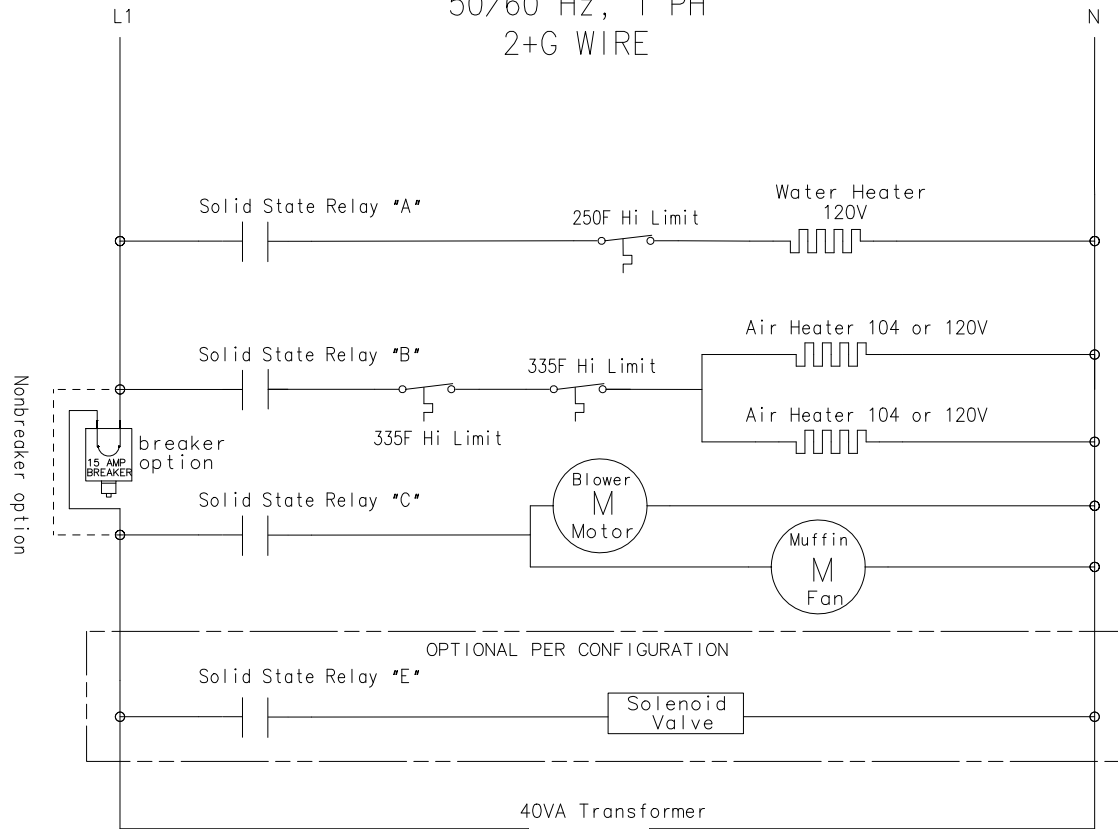


Figure 3-62


1. Pull the gasket to the side to expose the retainer screws. Figure 5-62.
2. Loosen the screws around the outside perimeter of the gasket.
3. With all the screws loose, the gasket should slide out from under the retainers.
4. Install new gasket in reverse order and unit is now ready for use.



MODEL HHC980/983
100/120V
50/60 Hz, 1 PH
2+G WIRE





(Control Inputs) (Control Outputs)

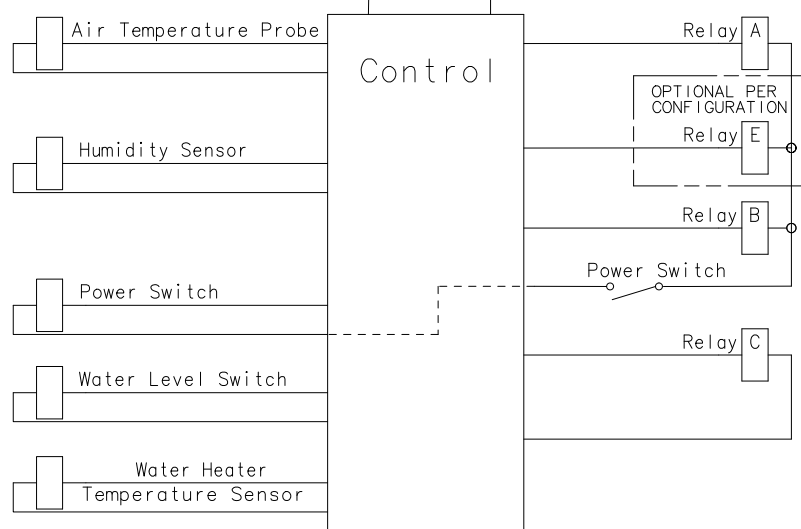




MODEL HHC980/983
200/208/240V
50/60 Hz, 1 PH
2+G WIRE

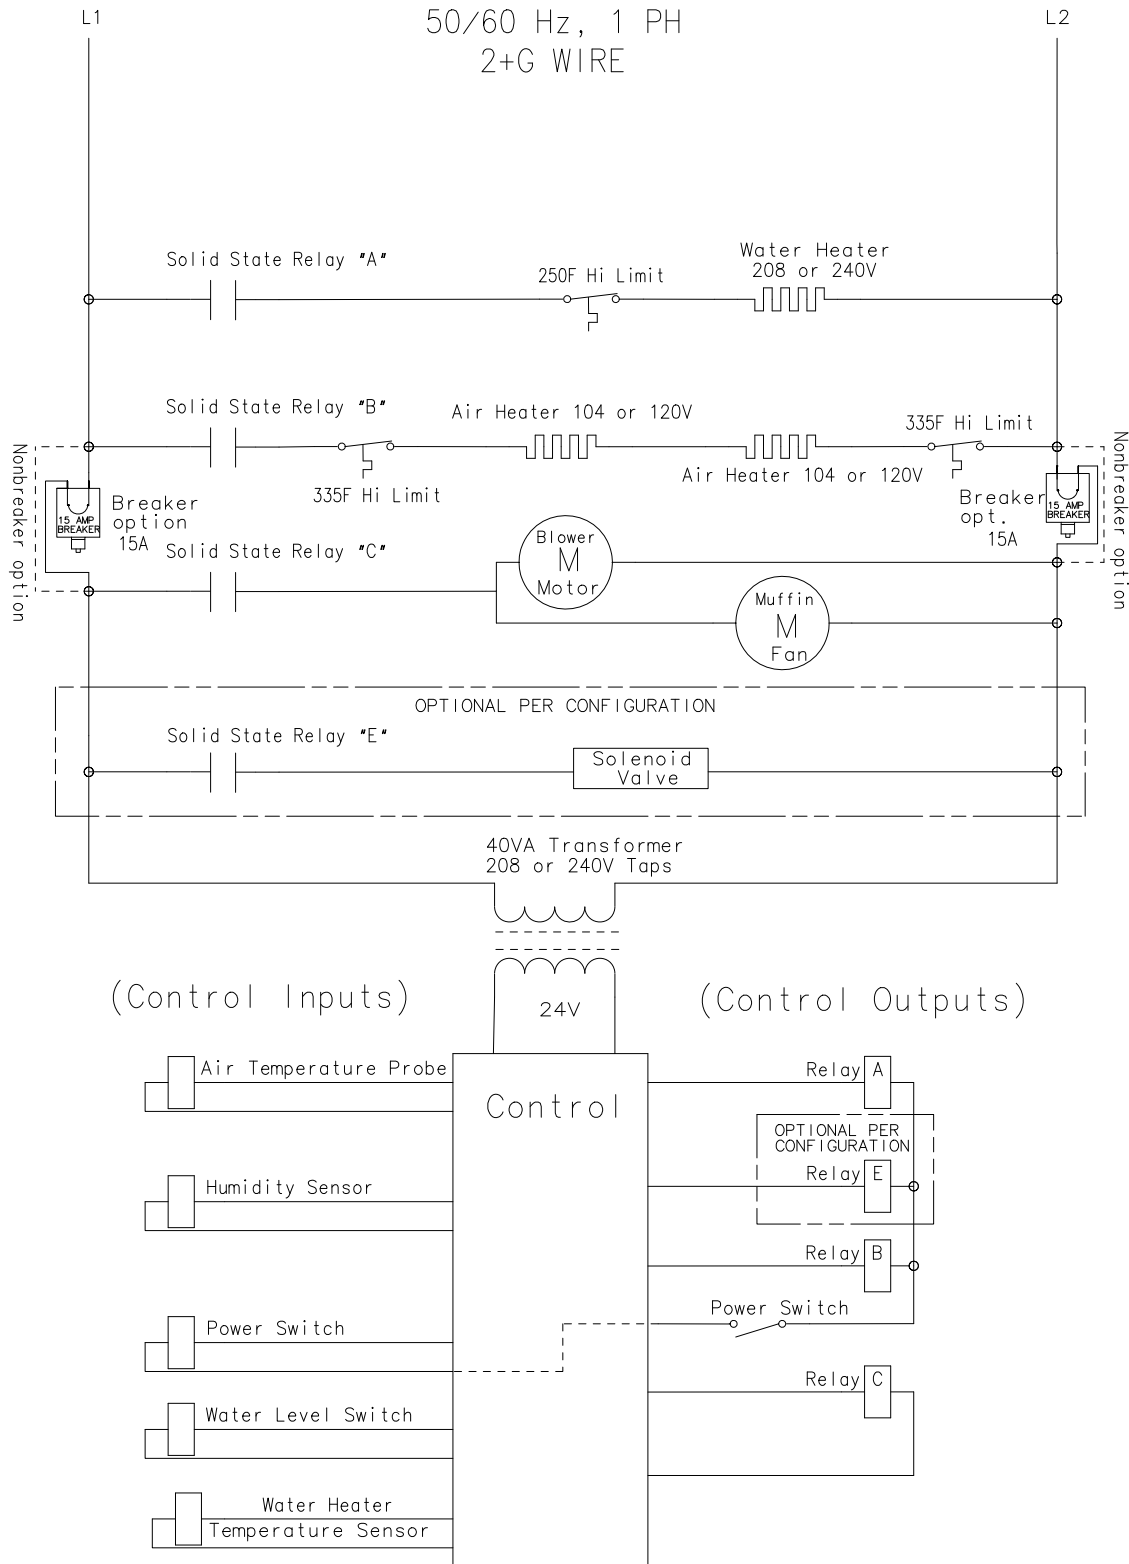


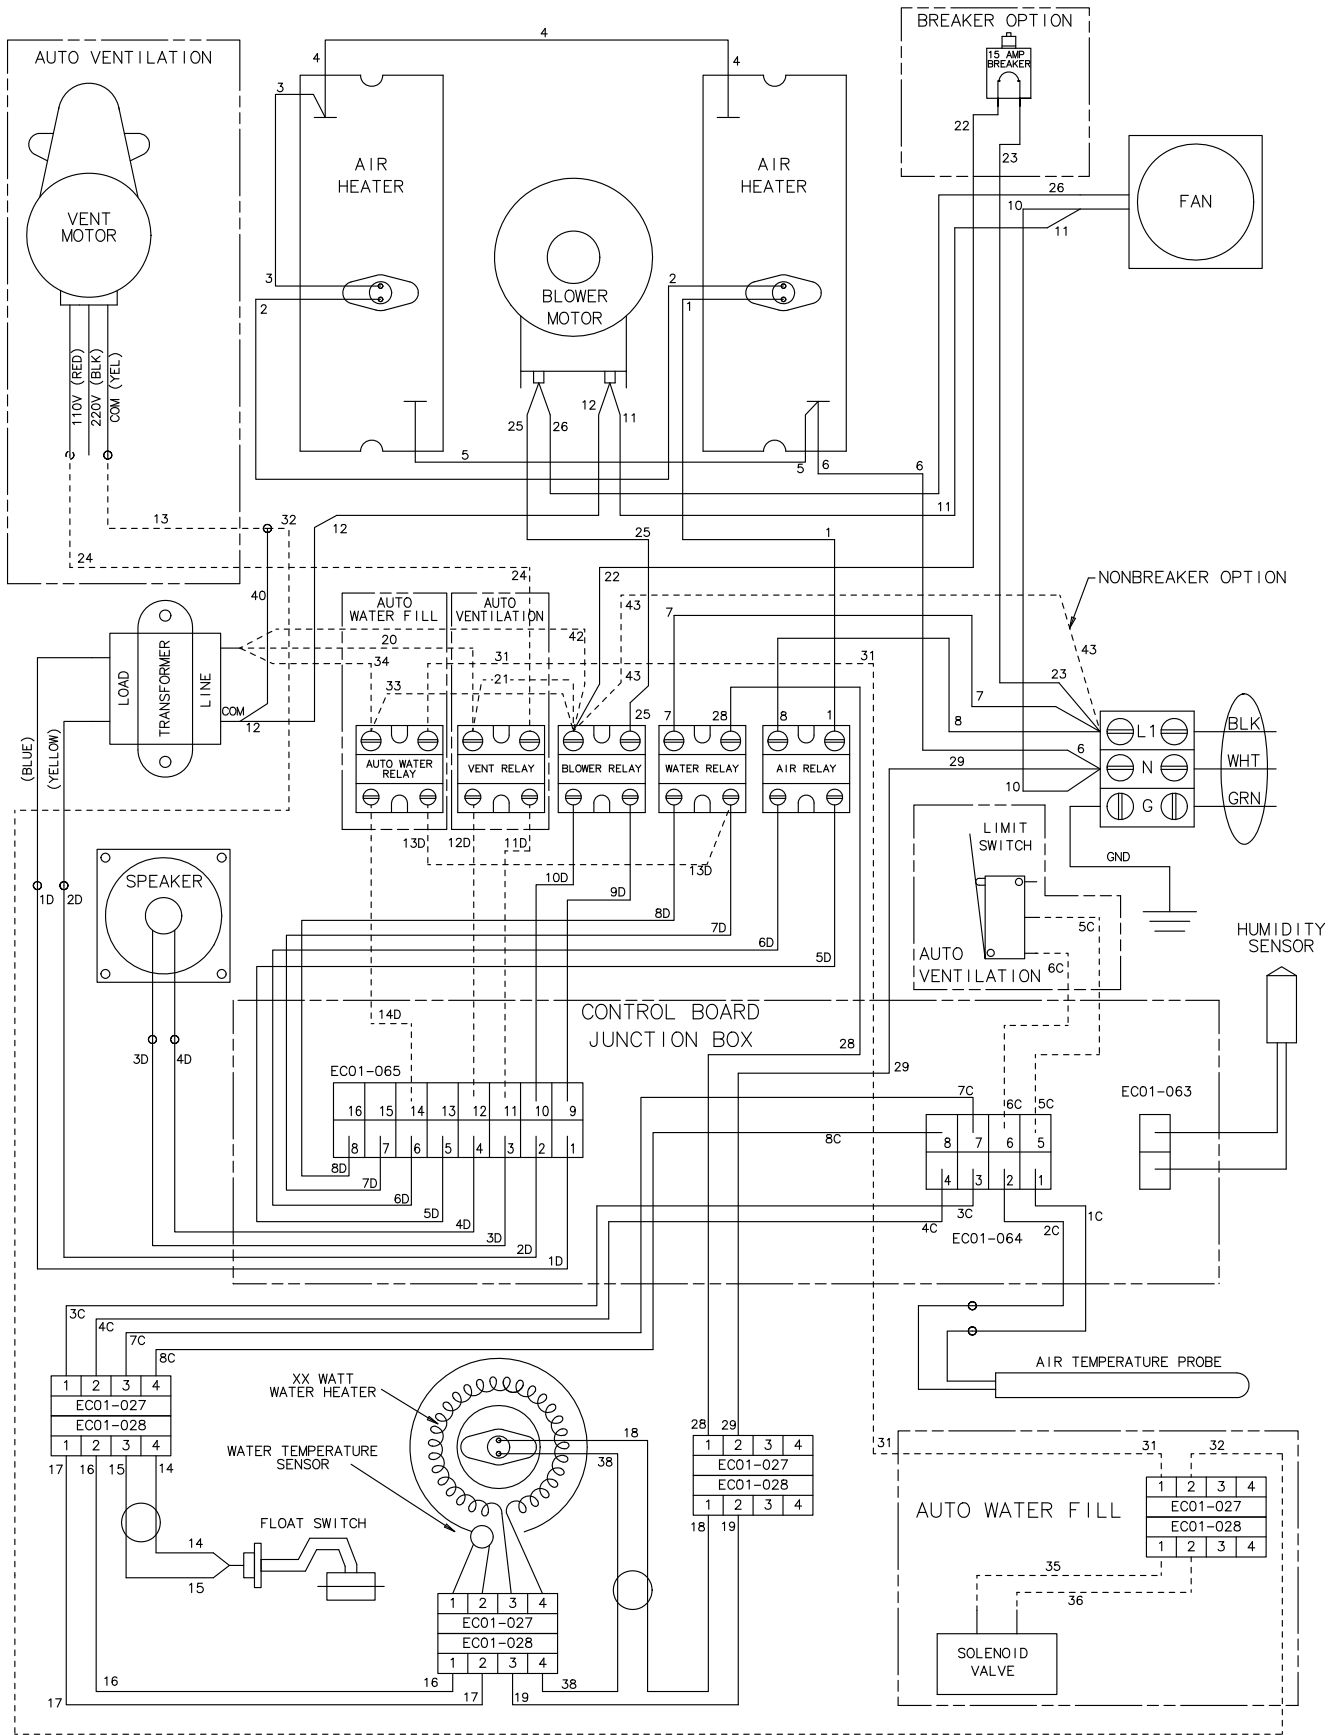


27485 - 120/60/1

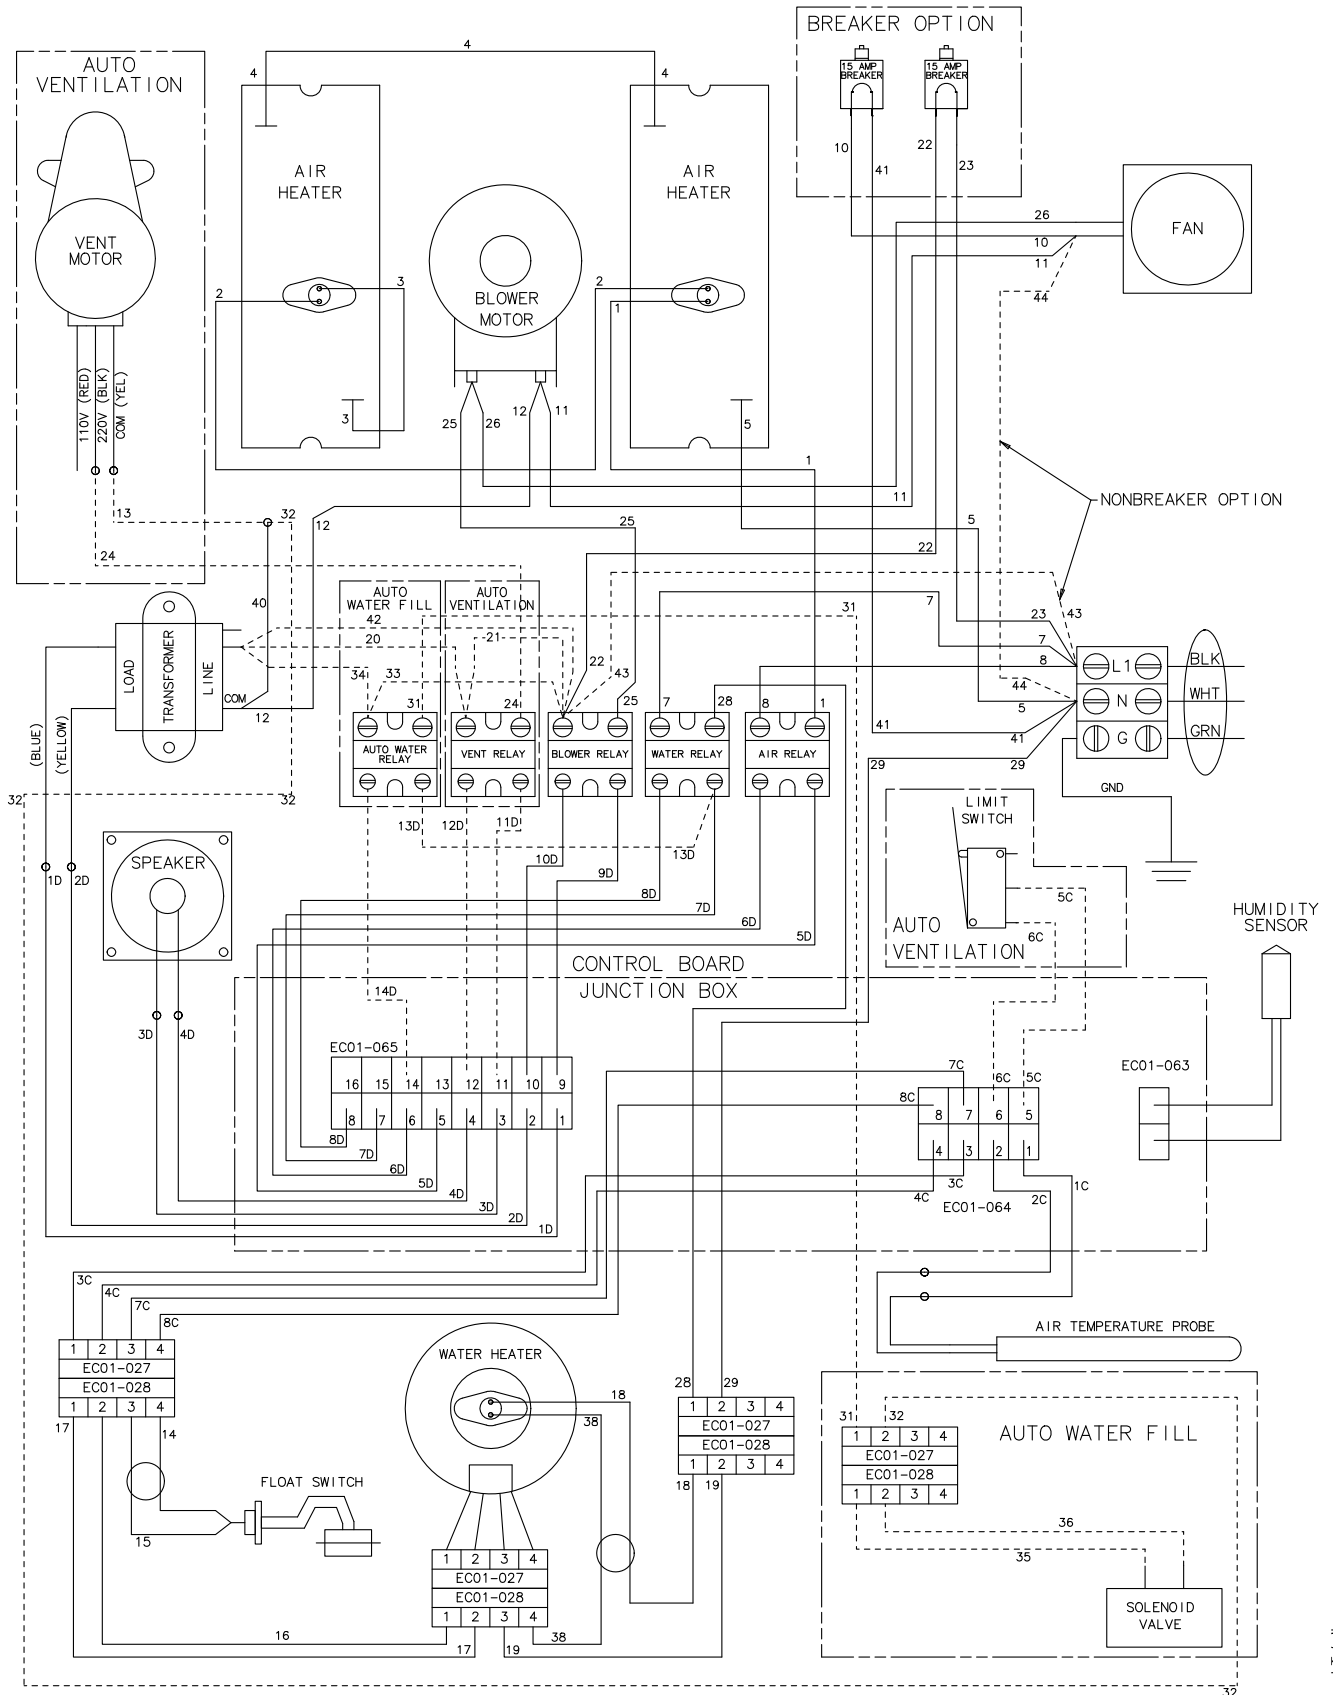

27486 - 208/240/60/1

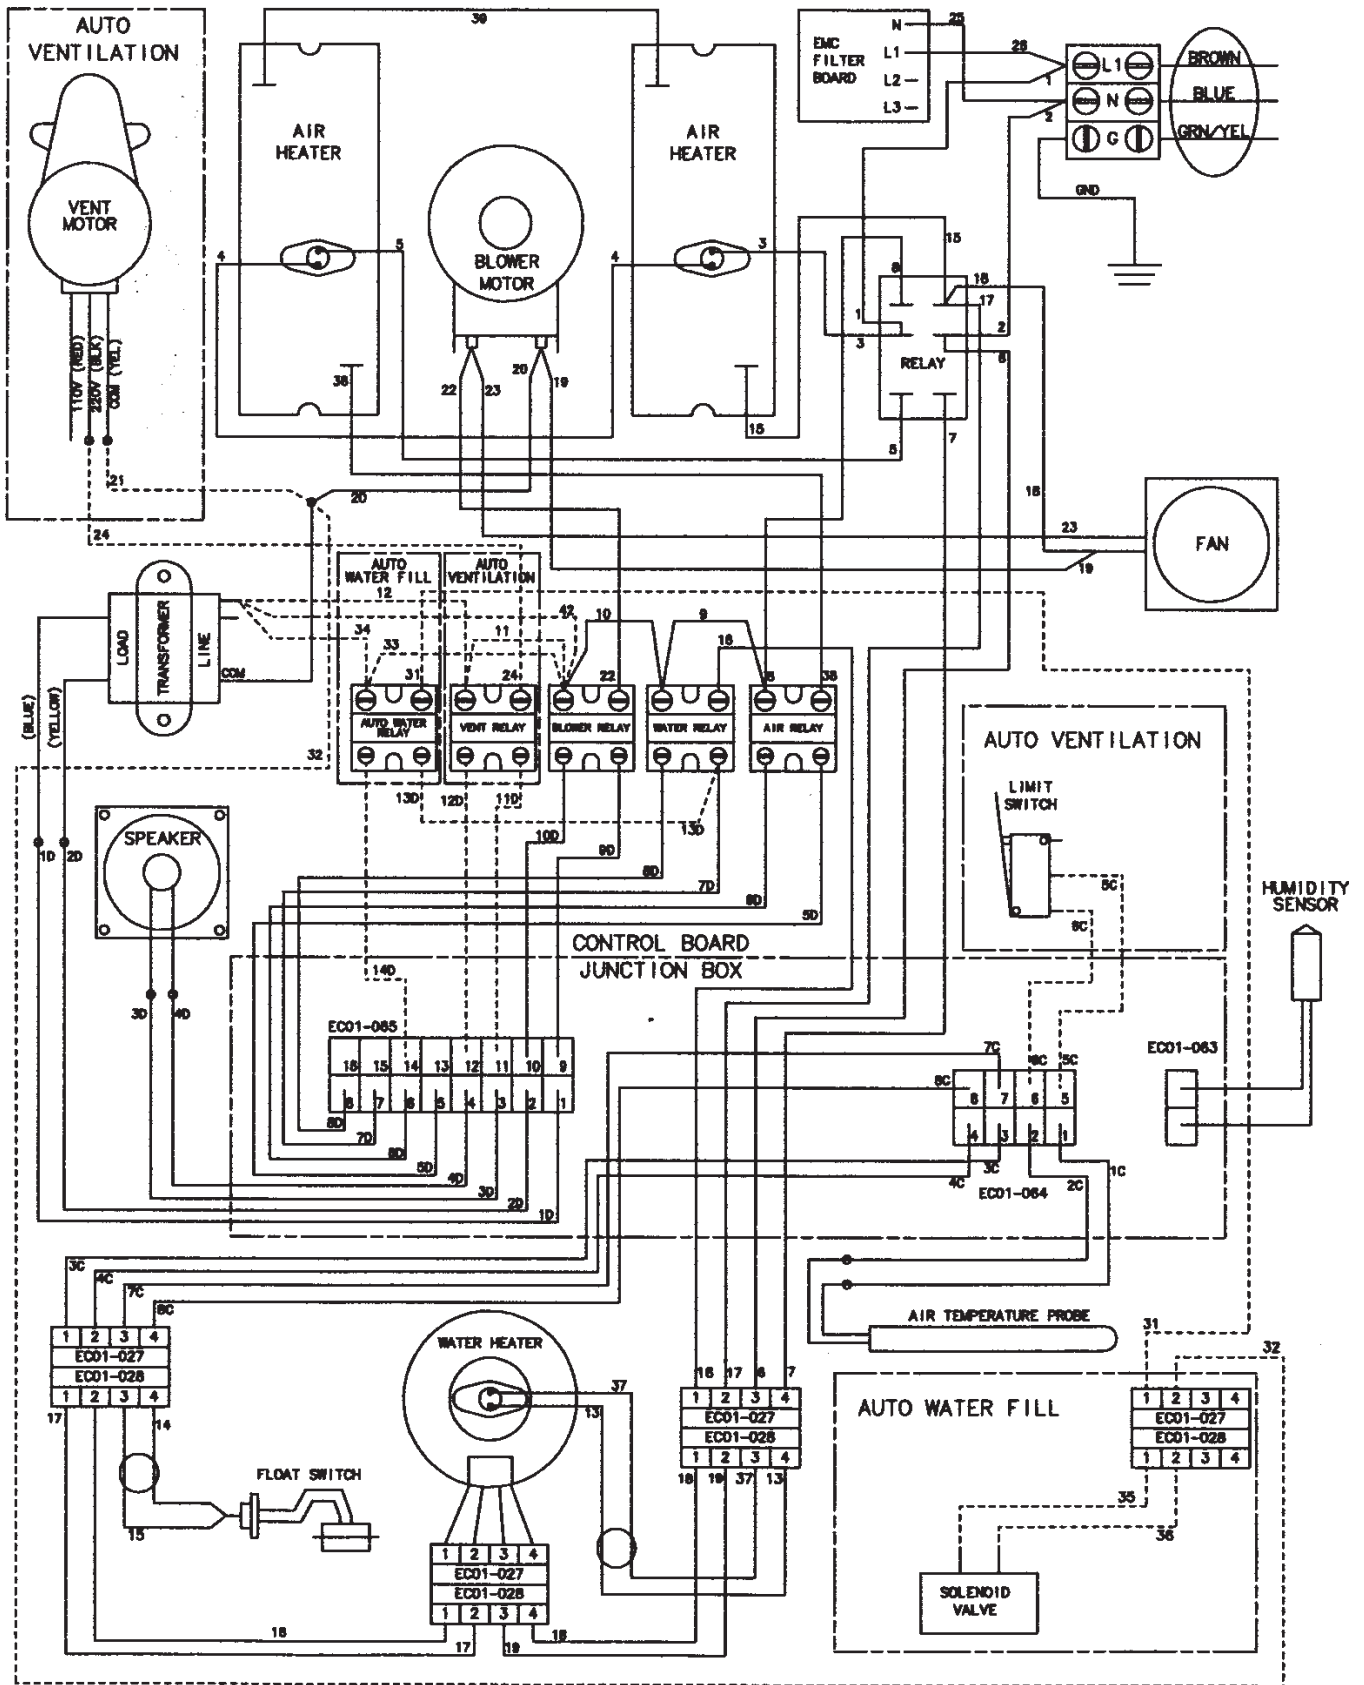

27487 - 230/50/1

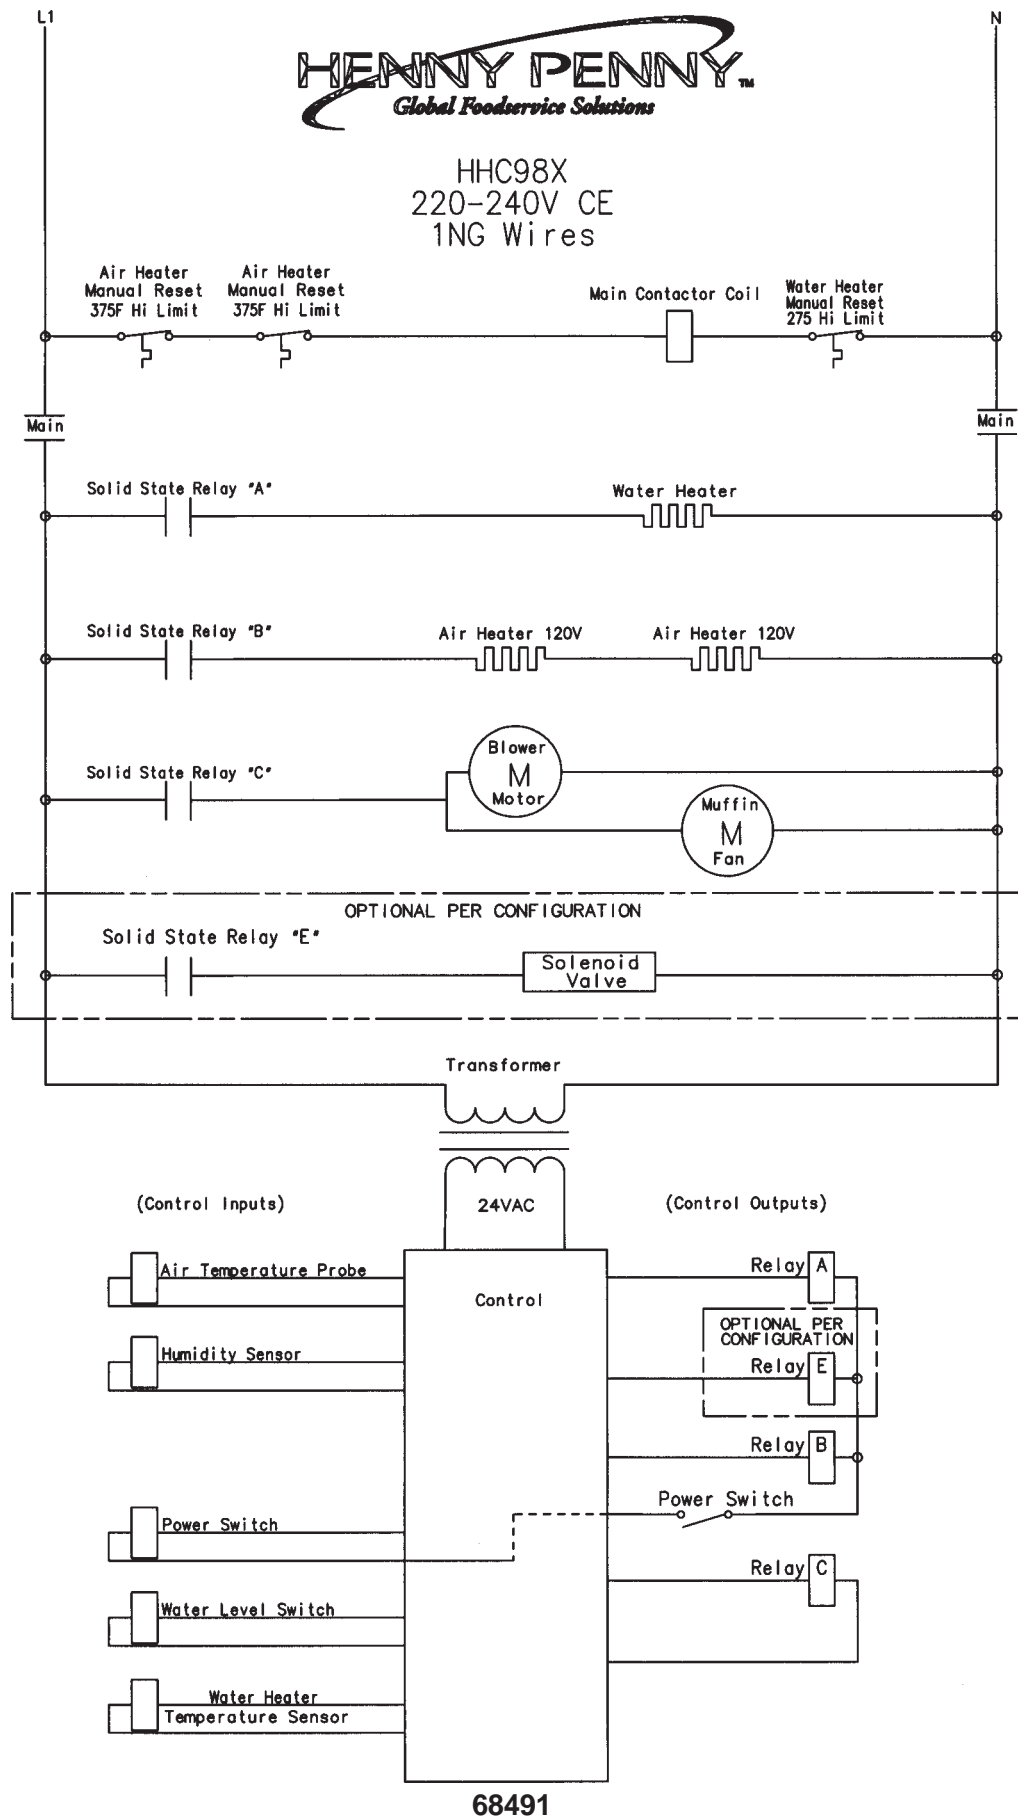

SECTION 4. PARTS INFORMATION

4-1. INTRODUCTION

This section lists the replaceable parts of the Henny Penny HHC-980/983 units.

4-2. GENUINE PARTS

Use only genuine Henny Penny parts in your cabinet. Using a part of lesser quality or substitute design may result in damage to the unit, or personal injury.

4-3. WHEN ORDERING PARTS

Once the parts that you want to order have been found in the parts list, write down the following information:

Example:	Item Number	<u>4</u>
	Part Number	<u>16684</u>
	Description	<u>Cooling Fan</u>

From data plate, list the following information:

Example:	Product Number	<u>HHC980.0</u>
	Serial Number	<u>AW001IE</u>
	Voltage	<u>208 Volt</u>

4-4. PRICES

Your distributor has a price list and will be glad to inform you of the cost of your parts order.

4-5. DELIVERY



Commonly replaced items are stocked by your local distributor and will be sent out when your order is received. Other parts will be ordered, by your distributor, from Henny Penny Corporation.

4-6. WARRANTY

All replacement parts (except lamps and fuses) are warranted for 90 days against manufacturing defects and workmanship. If damage occurs during shipping, notify the carrier at once so that a claim may be properly filed. Refer to warranty in the front of the manual for other rights and limitations.


4-7. RECOMMENDED SPARE PARTS FOR DISTRIBUTORS

Recommended replacement parts, stocked by your distributor, are indicated with $\sqrt{\quad}$ in the parts lists. Please use care when ordering recommended parts, because all voltages and variations are marked. Distributors should order parts based upon common voltages and equipment sold in their territory.

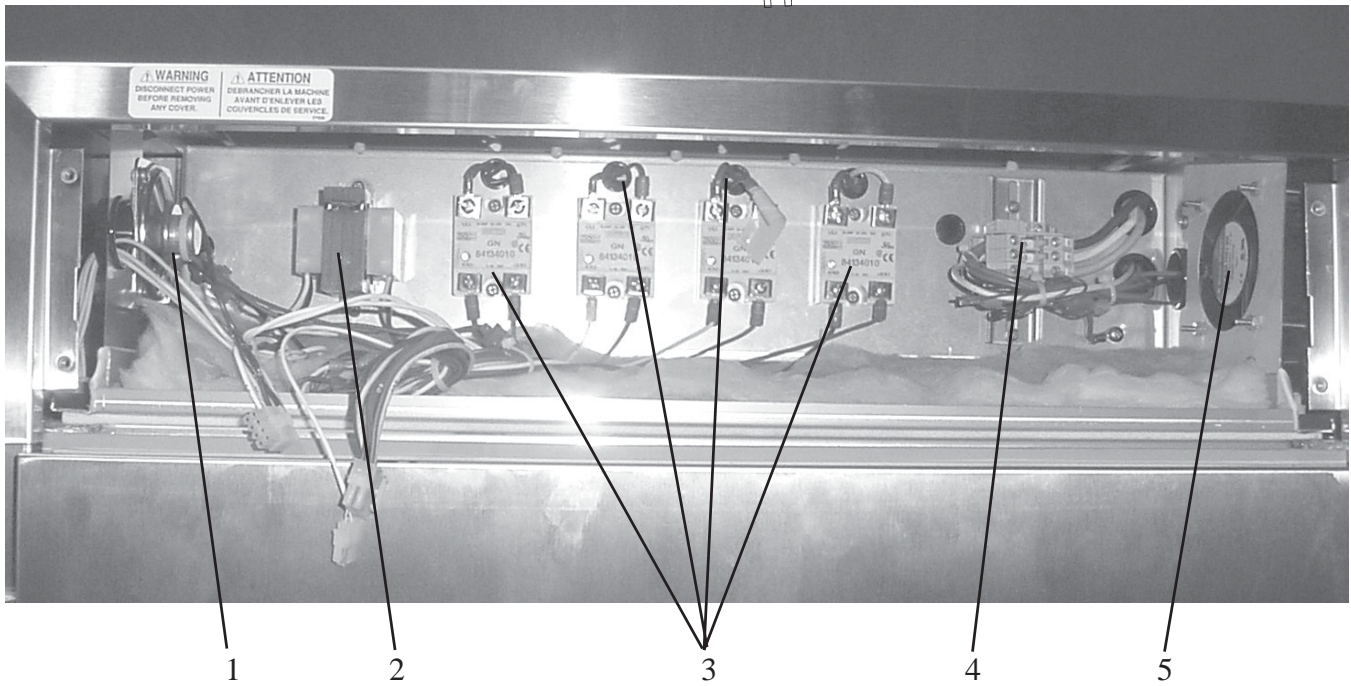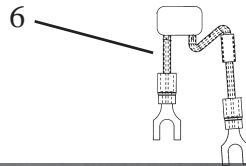

Item No.	Part No.	Description	Quantity	
			980	983
√ 1	63419	Speaker Assembly	1	1
√ 2	63460	Transformer Assembly - 120V Pri.	-	1
√ 2	63459	Transformer Assembly - 208/240V Pri.-24V Sec.	1	1
√ 3	40645	Relay - 25A - Solid State	4	4
4	63832	Terminal Block Assembly	1	1
√ 5	16684	Cooling Fan Assy - 120V	-	1
√ 5	16688	Cooling Fan Assy - 220V	1	1
√ 6	66879	Assy - Resistor Capacitor	1	1


√ recommended parts

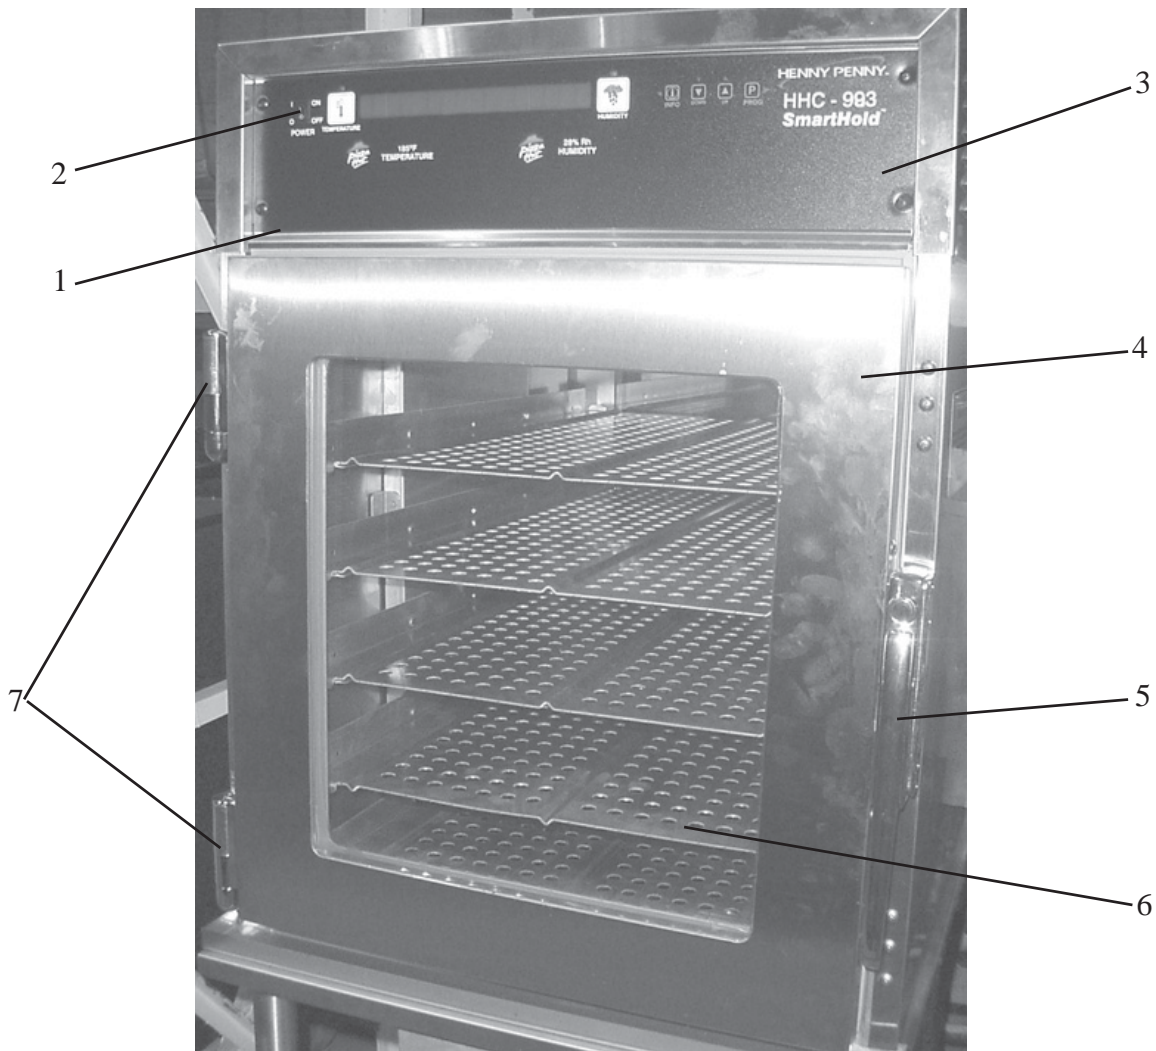

Item No.	Part No.	Description	Quantity	
			980	983
√ 1	14385	Kit - Control Board - 980	1	-
√ 1	14386	Kit - Control Board - 983	-	1
√ 2	63464	Power Switch	1	1
3	26858	Decal - Pizza Hut HHC-980	1	-
3	26859	Decal - Pizza Hut HHC-983	-	1
4	32768	Assy - 980 Glass Door - RH Top	1 or 2	-
4	32769	Assy - 980 Glass Door - RH Bottom	1 or 2	-
4	32770	Assy - 980 Glass Door - LH Top	1 or 2	-
4	32771	Assy - 980 Glass Door - LH Bottom	1 or 2	-
4	32774	Assy - 983 Glass Door - RH	-	1 or 2
4	32775	Assy - 983 Glass Door - LH	-	1 or 2
5	14272	Kit - Door Handle	2 or 4	2
6	24844	Pizza Trays	10	5
7	14271	Kit - Door Hinge	4 or 8	4
8*	27149	Door Stops (RH-RH & LH-LH pass thru units)	4	-


√ recommended parts

*not shown

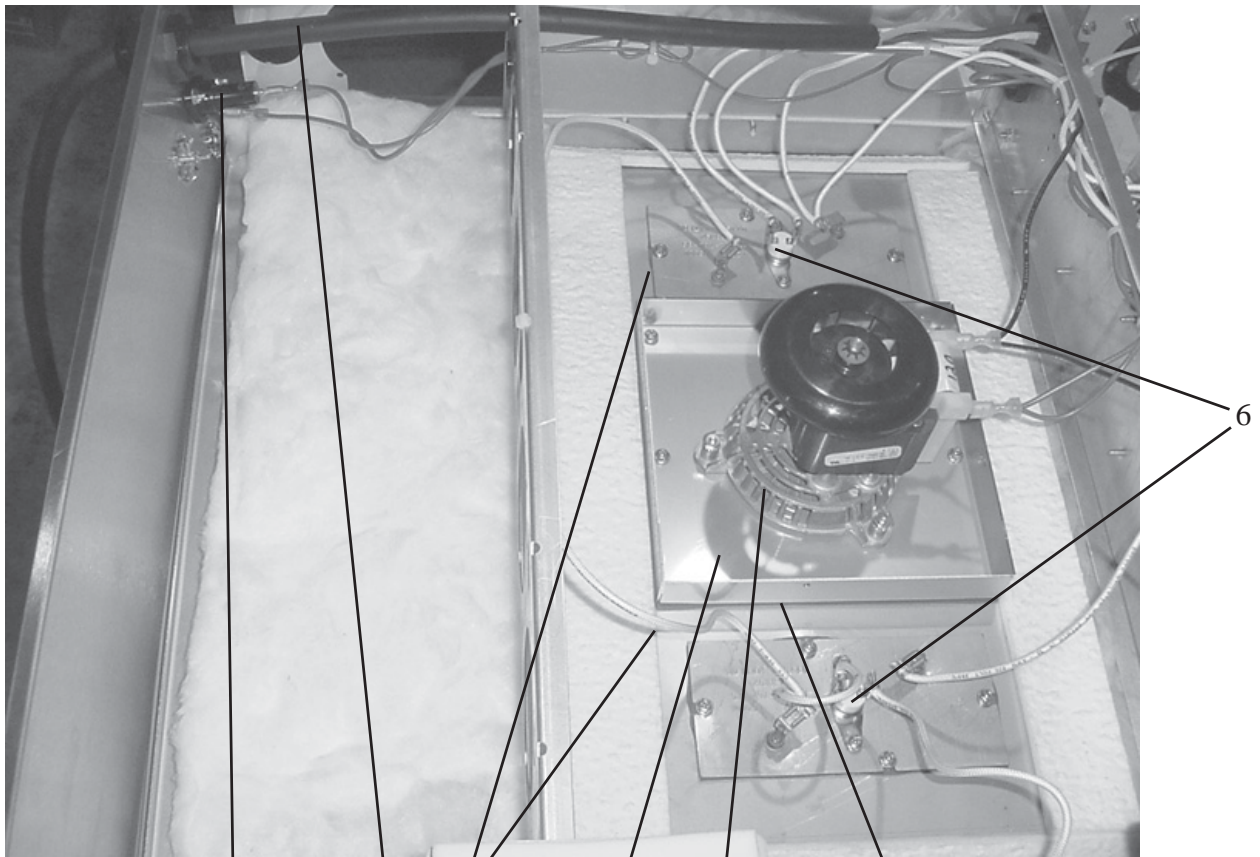

Item No.	Part No.	Description	Quantity	
			980	983
√ 1	18364	Fuse Holder Assembly	2	1
√ 1	EF02-007	Fuse - 15 Amp	2	1
√ 1	EF02-006	Fuse Holder	2	1
2	26906	Power Cord Assembly - 120V-20A	-	1
2	27312	Power Cord Assembly - 250V-20A	1	-
2	63870	Power Cord Assembly - 120V-30A	1	1
2	63927	Power Cord Assembly - 120V-50A	1	-
2	63930	Power Cord Assembly - 208/240V-20A	1	1
2	72532	Power Cord Assembly - 120-30A-Twist-Lock (Canada)	-	1
√ 3	64285	Air Heater Assy-1000W-104V(208V units) (includes 63815 gasket)	2	-
√ 3	64128	Air Heater Assy-1000W-120V (includes 63815 gasket)	2	-
√ 3	64126	Air Heater Assy-600W-120V (includes 63815 gasket)	-	2
√ 4	63363	Blower - Motor 120V	-	1
√ 4	63362	Blower - Motor 208V	1	1
√ 4	63361	Blower - Motor 240V	1	1
5	63814	Gasket - Plate - Motor Mounting	1	1
√ 6	18201	Sensor - High Limit - 335 Deg.	2	2
√ 6	59275	Sensor - High Limit - 375 Deg. - CE (manual reset)	2	2
√ 7*	51068	Assy - EMC Filter Board	1	1
8	59496	Stud Assy- Motor Mounting Plate	1	1
9*	63360	Fan Blade 5 3/8"	1	1

√ recommended parts
*not shown

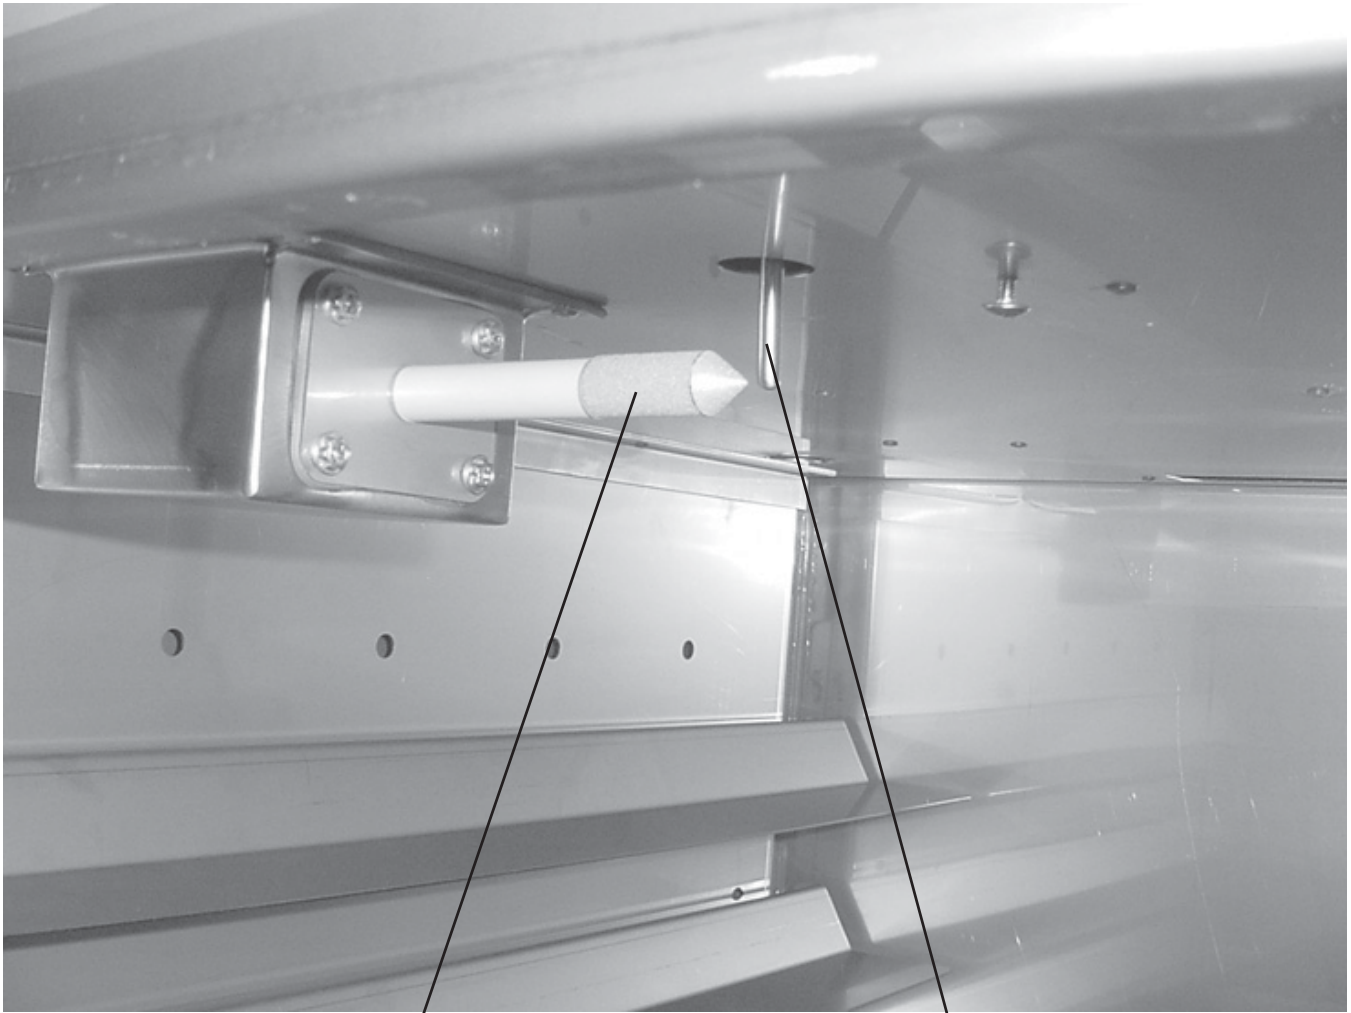


1

2


Quantity	Item No.	Part No.	Description	980	983
√	1	14390	Kit - Humidity Sensor (before 4/1/2005)	1	1
√	1	140135	Kit - Humidity Sensor (4/1/2005 & after)	1	1
√	2	64283	Probe-Air Temp	1	1
√	3*	14391	Kit - Calibration Board	1	1

√ recommended parts

*not shown

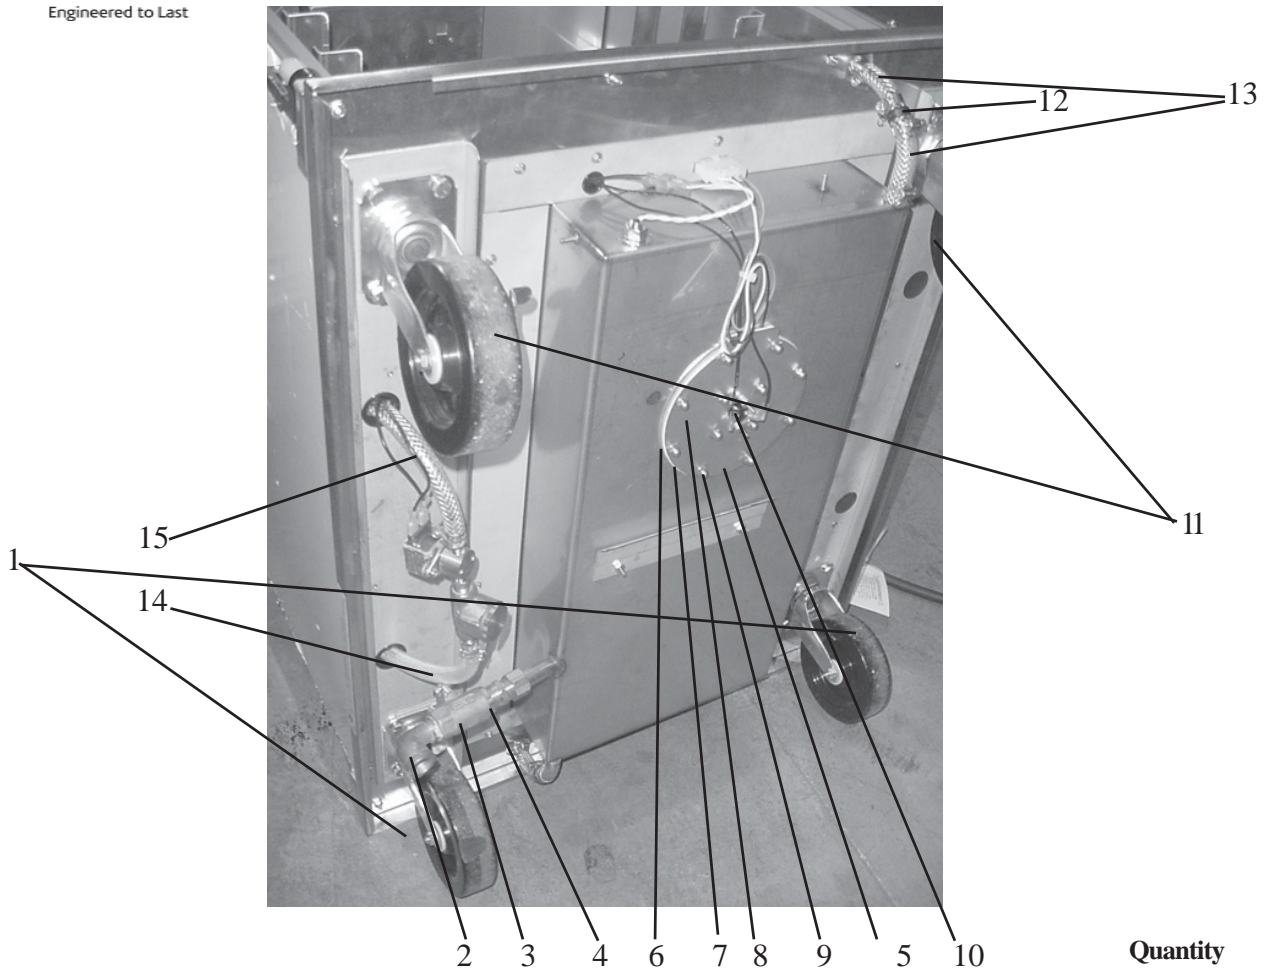


Item No.	Part No.	Description	Quantity		
			980	983	
1	27155	Caster	2	2	
1	27321	Caster - Dual 2 in. - Swivel (under counter models)	-	4	
2	FP01-127	1/2 x 1/2 90 Degree Street	1	1	
2	FP01-167	Elbow - 90 Deg. 1/2 x 3/8 BR Street (countertop models)	-	1	
3	63389	Valve - Drain w/Handle	1	1	
	39169	Handle - Drain (983s w/casters)	-	1	
3	27359	Valve - Drain (countertop & under counter models)	-	1	
4	FP01-131	Male Connector - 5/8 Tube	1	1	
4	FP01-159	Male Connector - 5/8 x 3/8 Tube (countertop models)	-	1	
√	5	140170	Kit - Water Pan Heater - 120V	-	1
√	5	140171	Kit - Water Pan Heater - 208V	1	1
√	5	140172	Kit - Water Pan Heater - 240V	1	1
6	71130	Spacer - Water Heater	1	1	
7	68130	Insulator - Water Heater	1	1	
8	67524	Plate - Water Heater Backing	1	1	
9	NS02-007	Nut Hex Keps - #8-32 C	12	12	
√	10	63831	Hi Limit - Water Pan	1	1
√	10	64297	Hi Limit - Water Pan - CE (manual reset)	1	1
11	27154	Caster - Locking 2	2		
12	64154	Check Valve	1	1	
13	63463	Water Pan Hose 2	2		
14	26968-001	Hose - Water - 980/983 - 13 in.	1	1	
14	67186	Tube - Water Inlet (copper) - WRAS	1	1	
15	26968-003	Hose - Water - 980 - 69 in.	1	-	
15	67229	Tube - Water Supply - 980 (copper-UK & Ireland)	1	-	
15	26968-002	Hose - Water - 983 - 39 in.	-	1	
15	67187	Tube - Water Supply - 983 (copper-UK & Ireland)	-	1	
16*	64351	Cover - Water Pan Heater	1	1	
16*	21031	Cover - Water Pan Heater - CE	1	1	
16*	27344	Cover - Water Pan Heater (under counter models)	-	1	

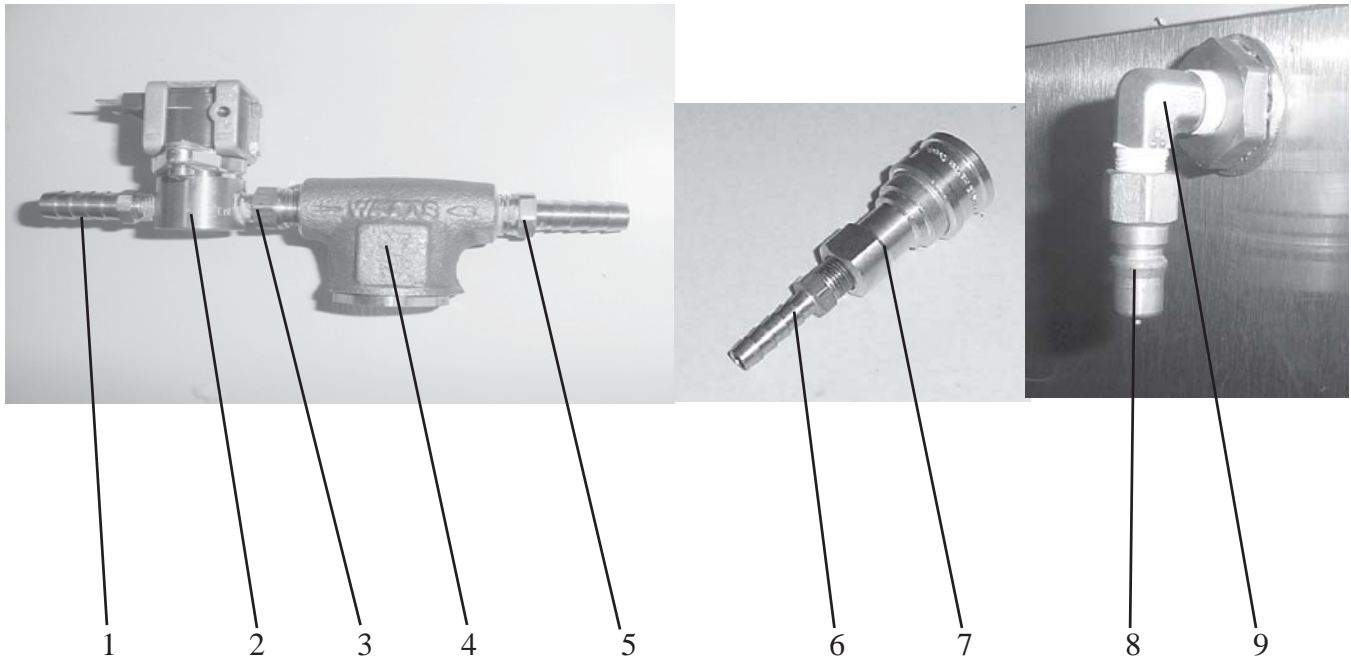

Item No.	Part No.	Description	Quantity	
			980	983
1	FP01-152	Fitting -3/8 Hose Barb -1/8 NPT	1	1
√ 2	25147	Solenoid - 120V	-	1
√ 2	27343	Solenoid - 208V	1	1
√ 2	25409	Solenoid - 240V	1	1
√ 2	32646	Solenoid - WRAS - 220/240V	1	1
3	FP01-012	Nipple Reducing 1/4 to 1/8 Z	1	1
√ 4	25208	Water Strainer	1	1
5	FP01-053	Fitting 3/8 ID Tubing -1/4 NPT	1	1
6	FP01-156	Fitting-1/4 Hose Barb-1/8 NPT	1	1
7	FP01-154	Socket-Quick Connect 1/8 IN	1	1
8	FP01-155	Plug-Quick Connect 1/8 IN	1	1
9	FP01-157	Elbow-Male 1/4 NPT X 1/8 NPT - 90	1	1

√ recommended parts

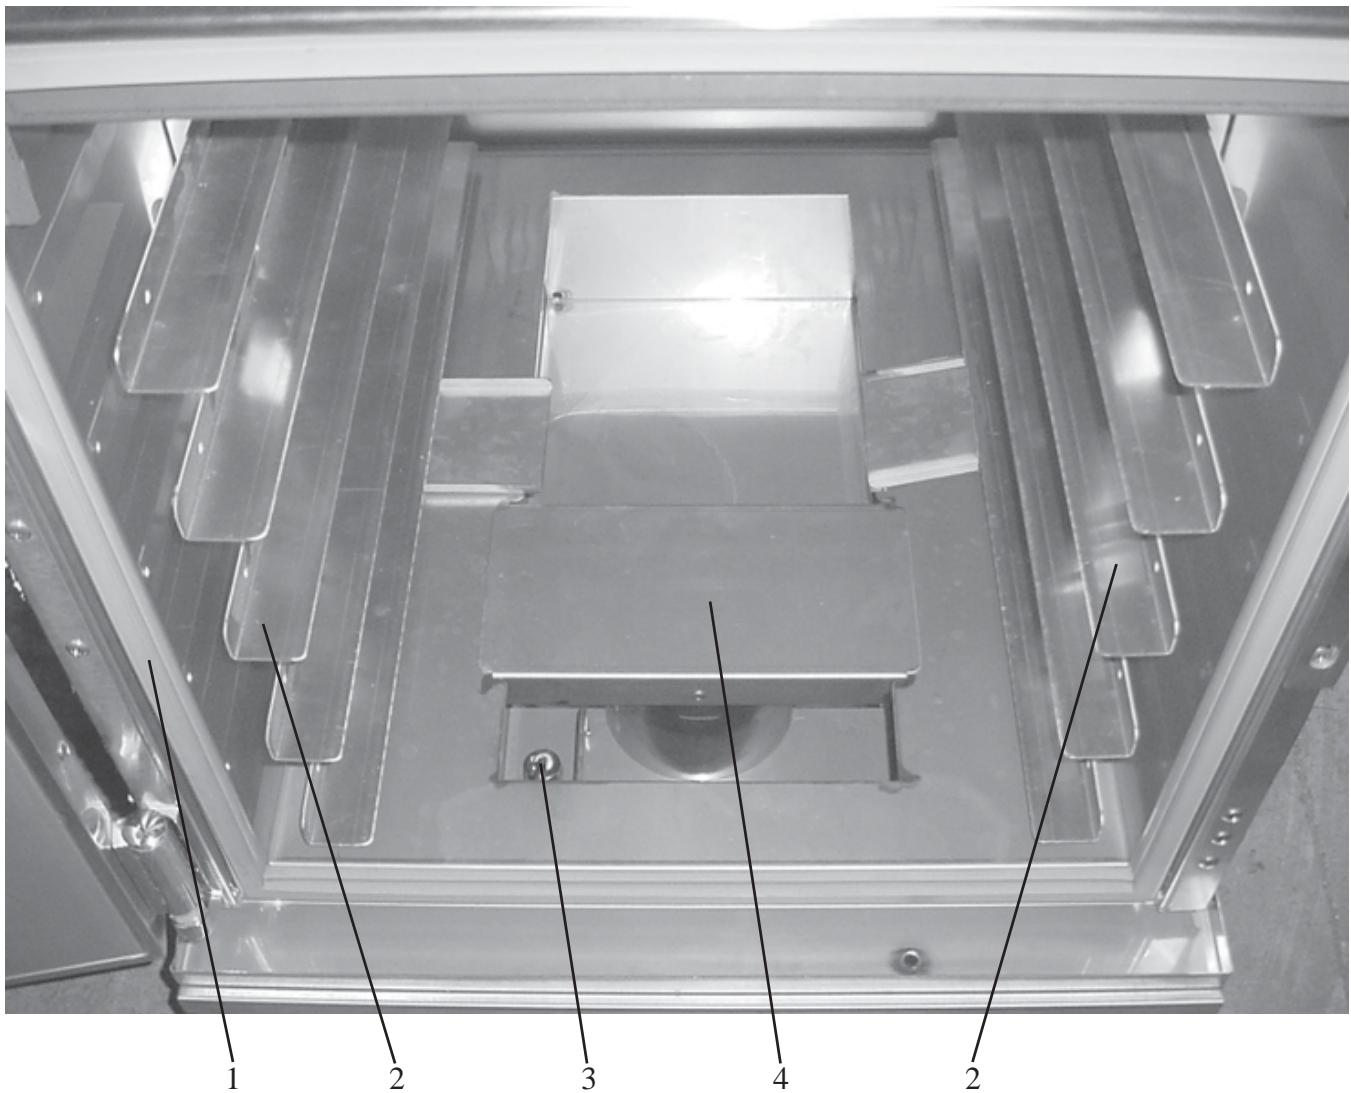

Item No.	Part No.	Description	Quantity	
			980	983
√ 1	25643	Gasket - Door - 980	2 or 4	-
√ 1	25793	Gasket - Door - 983	-	2
2	24909	Assy. - 983 Air Duct	-	2
2	27384	Assy. - 980 Air Duct - Upper	2	-
2	32511	Assy. - 980 Air Duct - Lower	2	-
√ 3	140245	Kit-Switch - Float Assembly	1	1
4	63525	Assy-Water Pan Cover & Ring (concentration ring)	1	1
4	27305	Assy-Water Pan Cover & Ring-under counter model (concentration ring)	-	1
4	SC01-076	Screw - #8-32 x 1/4 PH THD S	8	8
4	ME50-048	Standoff - .25 dia. x .63 lg. #8-32 SS	4	4

√ recommended parts

